

236i OPERATING INSTRUCTIONS

TO ARM

- (a) Make sure all the zone lights 1-6 are out
- (b) Enter your 4 digit number and press # key (eg. 1-2-3-4 #)
- (c) Exit via your normal path
Panel will beep on exit and red ARM light will be on

TO DISARM

- (a) Having entered via your normal route you will find the keypad beeping
- (b) Enter your 4 digit code and press # key (eg. 1-2-3-4 #)
Beeping should stop and keypad will be silent

AFTER AN ALARM

It is necessary to reset the zone that went into alarm
To do this, first Disarm the panel as in the above procedure (If required)
Push the * key followed by the digit "1", followed by the # key (eg. * 1 #)

* TO ARM THE SYSTEM IN "HOME" MODE

- (a) Make sure all the zone lights 1-6 are out
- (b) Push the * key followed by the digit "4", then push the # key (eg. * 4 #)
The panel will automatically arm in the "Home" mode

* THIS APPLIES IF

CHIEF HAS PREVIOUSLY
RECORDED ONE AREA
ISOLATED WITHIN THE
AREA IN HOME

TO ISOLATE A ZONE

- (a) Push the * key, enter the digit "2" then enter the zone to be isolated, then push the # key
Example To isolate zone "3"
Push the * key, enter "2", enter "3", then push the # key
Zone light no. "3" will be flashing slowly

PANIC

To activate the panic option
press the PANIC button (9) for 2 seconds

To reset the panel after PANIC
simply enter your number, followed by the # key (eg. 1-2-3-4 #)

FOR MORE ADVANCED FEATURES PLEASE CONSULT THE USER'S HANDBOOK