

Crow Blue RUNNER LCD Keypad Symbol Descriptions

'TROUBLE' Indicator
Comes On when there is a
Trouble Condition.
Refer to Users Guide for a
list of Trouble Conditions.

'ARM' Indicator
Comes On when the system
is Armed.

'STAY' Mode Button &
Indicator.
Comes On when the system
is Armed in Stay Mode.

'BYPASS' Mode Button &
Indicator.
Comes On when a Zone is
Bypassed.

'READY' Indicator
Comes On when System
is Ready for Arming.

'MEMORY' Mode Button.
Used to Initiate Displaying of
Alarm & System Related
Events from the Events Log.

Quick (Single Button)
'ARM' Key

A 'FIRE' Alarm is Generated
when these 2 buttons are
pressed together.

Digits 1 to 9 & 0 for
PIN Number Entry

A 'MEDICAL' Alarm is
Generated when these 2
buttons are pressed together.

'PROGRAM' Button
Used during
Programming Mode.

The 'CHIME' Feature is
Turned On / Off by this Button.

'ENTER' Button

The 'CONTROL' Button can
Turn On / Off the Outputs
(i.e.: Home Automation - Must
1st be Programmed by the
System Installer).



The 'CONTROL' & '0' Buttons
Pressed Together During Programming
will Clear (Delete) the content of a
programming location such as Phone
Numbers, Wireless Codes, etc.
The Enter Button Must then be pressed
to confirm the deletion.