

Digital Video System



User's Manual

Thank-You Note Before You Get Start

First of all, we would like to express our gratitude to you for purchasing this product. This product is designed to meet your personal needs with our great industry-designing ability and our everlasting perseverance to the quality of all our products.

This manual will introduce to you how to install this apparatus. Please keep it well for your future reference.



Now, we would like to invite you to personally experience all of the powerful functions this product offers.

Note: Version: 1016-06-D3-04-V354-02; AP: 0013.

Note: Any changes of AP, please refer to your distributor.

Note: Any changes of this manual made to the actual product are subjects to no further notification.

IMPORTANT SAFEGUARD

	CAUTION RISK OF ELECTRIC SHOCK	
<p>CAUTION: To reduce the risk of electric shock, do not expose this apparatus to rain or moisture.</p> <p>Only operate this apparatus from the type of power source indicated on the label. Failure to do so may cause injury or death by electric shock and invalidates the warranty.</p>		

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CE Mark

This apparatus is manufactured to comply with the radio interference requirements of EN 55022 : 1998 + A1 : 200, EN61000-3-2 : 2000, EN6100-3-3:1995, EN50130-4 : 1995 + A1 : 1998.



TABLE OF CONTENTS

PARTS AND FEATURES

1.1 FEATURES	1
1.2 PACKAGE CONTENTS	1
1.3 SPECIFICATION	2
1.4 FRONT PANEL	4
1.5 REAR PANEL	6

INSTALLATION AND CONNECTION

2.1 PHYSICAL CONNECTION	8
2.2 GETTING STARTED	9

ADVANCED DESIGN

3.1 MOTION DETECTION SETTING	10
3.2 QUICK EVENT SEARCH	11

BASIC OPERATION

4.1 RECORDING	11
4.2 PLAYBACK	12

DETAILED MENU CONFIGURATION

5.1 MENU TREE	13
5.2 ACCESS MENU	14
5.3 MAIN MENU OPTIONS_RECORD	15
5.4 MAIN MENU OPTIONS_TIMER	16
5.5 MAIN MENU OPTIONS_DATE	17
5.6 MAIN MENU OPTIONS_ADVANCE	18
5.7 ADVANCE MENU_CAMERA	18
5.8 ADVANCE MENU_DETECTION	19
5.9 ADVANCE MENU_DISPLAY	21
5.10 ADVANCE MENU_ALERT	22
5.11 ADVANCE MENU_REMOTE	23
5.12 ADVANCE MENU_SYSTEM	24
5.13 ADVANCE MENU_NETWORK	25
5.14 ADVANCE MENU_BACKUP	26
5.15 ADVANCE MENU_HDD INFO	27
5.16 ADVANCE MENU_EVENT LOG	27

ADDITIONAL OPERATION

6.1 SEARCH	28
6.2 2X DIGITAL ZOOM	29
6.3 KEY LOCK	29
6.4 SWITCH THE N/P SYSTEM	29
6.5 USB UPGRADE	30
6.6 LICENSED SOFTWARE AP	30
6.7 CONNECT TO AP VIA IE BROWSER	44
6.8 RETR	46
6.9 GPRS	46
6.10 OPTIONAL PHERIPHERALS	46

TROUBLE SHOOTING

7.1 FAQ	47
---------------	----

<u>APPENDIX #1</u> INSTALL THE HDD	48
---	----

<u>APPENDIX #2</u> PIN CONFIGURATION	49
---	----

<u>APPENDIX #3</u> IR TRANSMITTER	50
--	----

<u>APPENDIX #4</u> RECORDING TIME TABLE	55
--	----

PARTS AND FEATURES

1.1 FEATURES

DVS Features

- ❖ MPEG-4 real time compression format
- ❖ High resolution recording (For 16 channels):
Frame: 720 × 480 pixels with 120 IPS < NTSC > / 720 × 576 pixels with 100 IPS < PAL >
Field: 720 × 240 pixels with 240 IPS < NTSC > / 720 × 288 pixels with 200 IPS < PAL >
CIF: 352 × 240 pixels with 480 IPS < NTSC > / 352 × 288 pixels with 400 IPS < PAL >
- ❖ Image quality setting: Best, High, Normal, and Basic
- ❖ Extensive recording time by connected to Independent Disk Array.
- ❖ Remote surveillance on mobile phone via GPRS, or on PC through internet connection
- ❖ Easy file backup methods with USB, DVD R/W (optional), and CD R/W (optional)
- ❖ Alarm trigger recording will send alert with images to designated e-mail and FTP address
Also supports pre-alarm recording
- ❖ Advanced motion detection function (4 different adjustable factors of motion detection sensitivity) and convenient search function.
- ❖ Pentaplex functions (live display, record, playback, backup, and network)
- ❖ Web function supports MJPEG compression format for transmitting over the internet
- ❖ Remote Event Trigger Recording
- ❖ Web surveillance supports multiple viewers simultaneously
- ❖ Support covert screen for live view channels
- ❖ IR remote control of the system and PTZ through RS-485
- ❖ Support PELCO-D protocol
- ❖ Support Hot Point function
- ❖ 2 HDD bases built-in, each can support more than 400GB
- ❖ Easy system upgrade via USB
- ❖ Support static IP, dynamic IP, and DHCP with DDNS function
- ❖ Support manual / timer / motion / alarm / remote recording functions
- ❖ Record audio with 4ch in and 2ch out
- ❖ System auto recovery after power reconnected
- ❖ Watermark function ensures authentication of recorded images
- ❖ Support SATA HDD
- ❖ Optional: DVD R/W / CD R/W backup; Independent disk array; VGA output; GPRS connector.

1.2 PACKAGE CONTENTS



Digital Video System



Adapter



Licensed Software AP



* 8

Accessories Packs



IR Transmitter and
IR Receiver (1.5m)



Manual & Quick Start

NOTE: Please check the package contents to make sure that you receive all accessories shown above.


1.3 SPECIFICATION





Video System	NTSC / PAL (switch able)	
Video Compression Format	MPEG 4	
Video Input	16 / 8 Channels. Composite video signal 1 Vp-p 75Ω BNC	
Video Loop Out	16 / 8 Channels. Composite video signal 1 Vp-p 75Ω BNC	
Video Output	Main Monitor Output: Composite video signal 1 Vp-p 75Ω BNC Call Monitor Output: Composite video signal 1 Vp-p 75Ω BNC	
Maximum Recording Rate	16 channels ~ Frame: 720 × 480 pixels with 120 IPS < NTSC > / 720 × 576 pixels with 100 IPS < PAL > Field: 720 × 240 pixels with 240 IPS < NTSC > / 720 × 288 pixels with 200 IPS < PAL > CIF: 352 × 240 pixels with 480 IPS < NTSC > / 352 × 288 pixels with 400 IPS < PAL >	
	8 channels ~ Frame: 720 × 480 pixels with 60 IPS < NTSC > / 720 × 576 pixels with 50 IPS < PAL > Field: 720 × 240 pixels with 120 IPS < NTSC > / 720 × 288 pixels with 100 IPS < PAL > CIF: 352 × 240 pixels with 240 IPS < NTSC > / 352 × 288 pixels with 200 IPS < PAL >	
Adjustable Recording Speed	16 channels ~ Frame: 120, 60, 30, 15 IPS <NTSC> / 100, 50, 25, 13 IPS <PAL> Field: 240, 120, 60, 30 IPS <NTSC> / 200, 100, 50, 25 IPS <PAL> CIF: 480, 240, 120, 60 IPS <NTSC> / 400, 200, 100, 50 IPS <PAL>	
	8 channels ~ Frame: 60, 30, 15, 7 IPS <NTSC> / 50, 25, 12, 6 IPS <PAL> Field: 120, 60, 30, 15 IPS <NTSC> / 100, 50, 25, 12 IPS <PAL> CIF: 240, 120, 60, 30 IPS <NTSC> / 200, 100, 50, 25 IPS <PAL>	
Image Quality Setting	Best, high, normal, and basic	
Hard Disk Storage	IDE type, ATA66, supported HDD * 2, support each HDD capacity over 400GB	
HDD Quick Cleaning	Quick clean up the "index system" of the recorded files. 250GB under 2 seconds	
Support SATA HDD	Yes (Ready in September, 2005)	
Recording Mode	Manual / Timer / Motion / Alarm / Remote	
Watermark	Yes (Ready in September, 2005)	
Refresh Rate	16 channels: 480 IPS for NTSC / 400 IPS for PAL	8 channels: 240 IPS for NTSC / 200 IPS for PAL
Pentaplex Operation	Pentaplex functions (live display, record, playback, backup, and network)	
Audio I/O	4 audio inputs, 2 audio outputs (Mono)	

Specification Continued...		
Motion Detection Area	16 × 12 grid per camera for all channels	
Motion Detect Sensitivity	4 adjustable variable with precise calculation for motion detection	
Pre-alarm Recording	Yes (Ready in September, 2005)	
Backup Device	USB1.1 Backup, and network remote backup	
R.E.T.R.	Support Remote Event Trigger Recording	
Web Transmitting Compression Format	Motion JPEG	
Ethernet	10/100 Base-T. Support remote control and live view via Ethernet.	
Mobile Surveillance	Support GPRS to access the system via mobile phone (require J2ME, MIDP2.0 protocol)	
Web Interface	Support licensed software AP, and IE browser	
Remote Alarm Notification	E-mail images, and images uploading to FTP site's specific account	
Network Connection	Support static IP, dynamic IP, and DHCP with DDNS function	
Remote Control	Remote control DVS and PTZ via IR transmitter (RS-485)	
PTZ control	Support PELCO-D protocol (Ready in September, 2005)	
Hot Point Control	Yes	
Dwell Time (Sequential Channel Switch)	Programmable with adjustable dwell time	
Alarm I/O	16 channels: 16 inputs, 1 outputs	8 channels: 8 inputs, 1 outputs
Picture Zoom	Support 2X digital zoom function	
Key Lock	Yes	
Video Loss Detection	Yes	
Camera Title	Support up to 6 letters	
Video Adjustable	Hue / Color / Contrast / Brightness	
Date Display Format	YY/MM/DD, DD/MM/YY, MM/DD/YY, and Off	
Power Source	DC 19V	
Current Consumption	< 64 W	
Operating Temperature	10°C ~ 40°C (50°F~104°F))	
Dimensions (mm)	432mm (W) × 90mm (H) × 326mm (D)	
System Recovery	System auto recovery after power reconnected	
Optional Peripherals	DVD R/W backup or CD R/W backup; Independent Disk Array; VGA output; GPRS connector (Ready in September, 2005)	

☐ Design and specification are subject to change without notice.

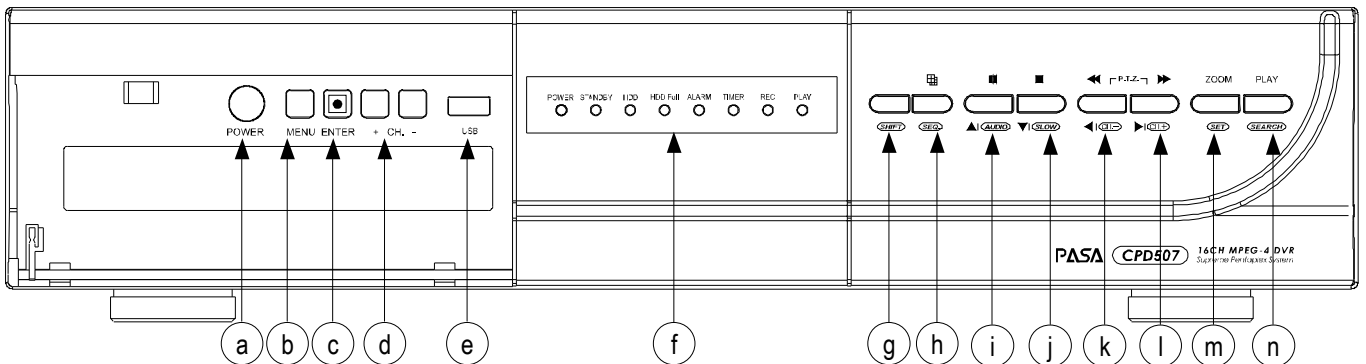
1.4 FRONT PANEL

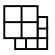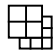

- 1) **POWER: (a)**
Press POWER button to turn on/ turn off the DVS.
(Under recording mode, please stop record before turn off the DVS)
- 2) **MENU: (b)**
Press MENU button to enter main menu.
- 3) **ENTER / RECORD  : (c)**
Press ENTER button to confirm. / Press “” to activate the manual recording.
- 4) **“+ CH -”: (d)**
Press “+ CH -” button to change the setting in the menu / to select the channel.
- 5) **USB: (e)**
Support firmware update and files backup.
- 6) **LED LIGHT: (f)**
POWER: Power on
STANDBY: Standby
HDD: HDD is reading or recording
HDD Full: HDD is full.
ALARM: Once the alarm is triggered
TIMER: When timer recording is turned on.
REC: Under recording status
PLAY: Under playing status
- 7) **MODE  : (h)**
Press “” button to switch channel display mode (16, 9, 4 channels display mode, and show the switch display by each channel)

- 8) "■ ■": (i)
Press "■ ■" button to pause the play back files.
- 9) "■": (j)
Press "■" button to stop the play back files.
- 10) "◀◀": (k)
Under playback mode, press "◀◀" button to fast rewind.
- 11) "▶▶": (l)
Under playback mode, press "▶▶" to fast forward.
- 12) "ZOOM": (m)
Press "ZOOM" button to enlarge the picture of selected channel (2X digital zoom).
- 13) "PLAY": (n)
Press "PLAY" button to playback recorded files.
- 14) "▲ ▼ ◀ ▶": (i), (j), (k), (l)
Press "▲ ▼ ◀ ▶" to move the cursor up / down / left / right.
- 15) "SHIFT" + "SEQ.": (g+h)
Press "SHIFT" + "SEQ." to activate the call monitor function and press "SEQ." to escape the call monitor mode.
- 16) "SHIFT" + "AUDIO": (g+i)
Press "SHIFT" + "AUDIO" to select live or playback sounds of the 4 audio channels.
- 17) "SHIFT" + "SLOW": (g+j)
Under playback mode, press "SHIFT" + "SLOW" to show slow playback.
- 18) "SHIFT" + "CH.-" or "CH.+": (g+k) or (g+l)
Press "SHIFT" + "CH.-" or "CH.+" change the setting in the menu / to select the channel.
- 19) "SHIFT" + "SET": (g+m)
Press "SHIFT" + "SET" to change channel display position.
Press "▲ ▼ ◀ ▶" to select the channel which You would like to change,
Press "+" or "-" select the channel which You would like show.
Press "ENTER" button to confirm.
- 20) "SHIFT" + "SEARCH": (g+n)
Press "SHIFT" + "SEARCH" button to enter the search mode.
- 21) "◀◀" + "▶▶": (k+l)
Press "◀◀" + "▶▶" buttons at the same time to enter the PTZ control mode.
- 22) R.E.T.R.: (b+d)
Press "MENU" + "-" button to activated R.E.T.R. function 3 / 5 / 10 minutes later.
Please refer to "Section 5.12"

1.5 REAR PANEL

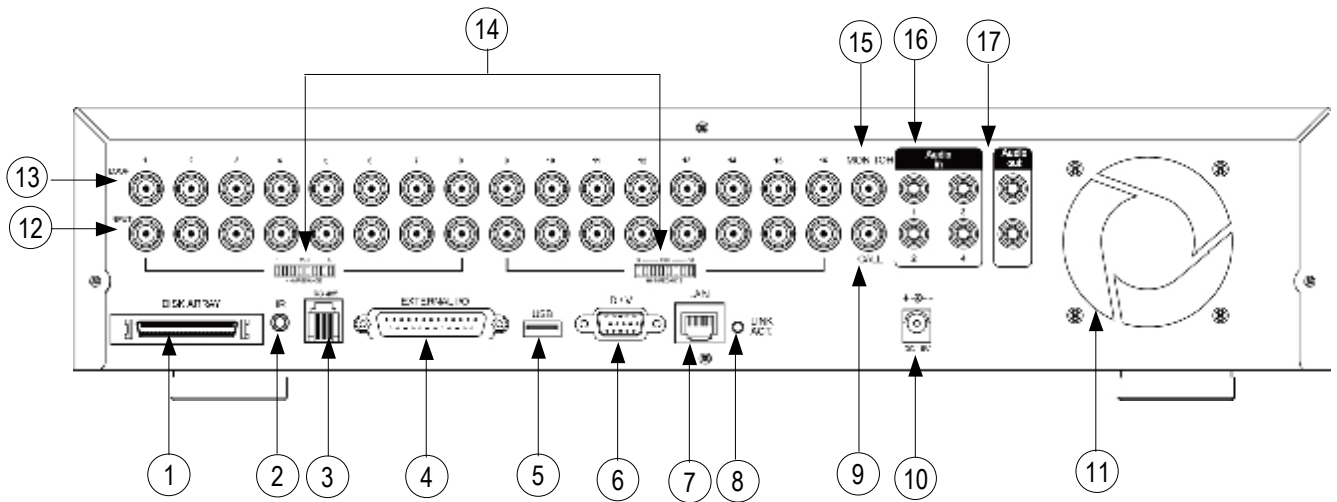


- 1) **DISK ARRAY PORT:**
Connect to disk array for extend HDD capacity.
- 2) **IR:**
Connect to IR receiver.
- 3) **RS485:**
Connect to external device (such as PTZ camera) with RS485-A and RS485-B.
- 4) **EXTERNAL I/O PORT:**
Connect to external device. Control external device or controlled remotely by external device. Alarm input, external alarm.
- 5) **USB PORT:**
Support firmware update and files backup.
- 6) **D/V PORT (Digital Video Port):**
Connect to VGA connector card.
- 7) **LAN:**
Connect to Internet by LAN cable.
- 8) **LINK / ACT LED light:**
When the Internet is activated, the LED light will turn on.
- 9) **CALL MONITOR:**
Connect to CALL monitor. Show the Switch Display. When the alarm is triggered, the call monitor will show the triggered channel for a period of time.

- 10) POWER:
Connect to provided Adapter.
- 11) FAN:
For ventilation.
- 12) VIDEO INPUT (CHANNEL 1 - 16 / CHANNEL 1 - 8) :
Connect to video source, such as camera.
- 13) LOOP (CHANNEL 1 - 16 / CHANNEL 1 - 8):
Video output.
- 14) 75 Ω / HI:
When using Loop function, please switch to HI. When you don't use Loop function, please switch to 75 Ω .
- 15) MONITOR:
Connect to Main monitor.
- 16) AUDIO IN (1-4):
Connect to audio source, such as microphone.
4 audio inputs, but users can only select 1 for recording.
- 17) AUDIO OUT :
Connect to monitor or speaker.
With 2 mono audio outputs from the same source.

INSTALLATION AND CONNECTION


2.1 PHYSICAL CONNECTION

- 1) Install HDDs.
- 2) Please refer to [Appendix #1](#) for installation instructions. The HDDs must be installed before the DVS is turned on.
- 3) The illustration below will show you how to connect cameras and monitor to DVS.
- 4) Connecting the DVS to your existing surveillance system, as shown below. (For 16 channels.)

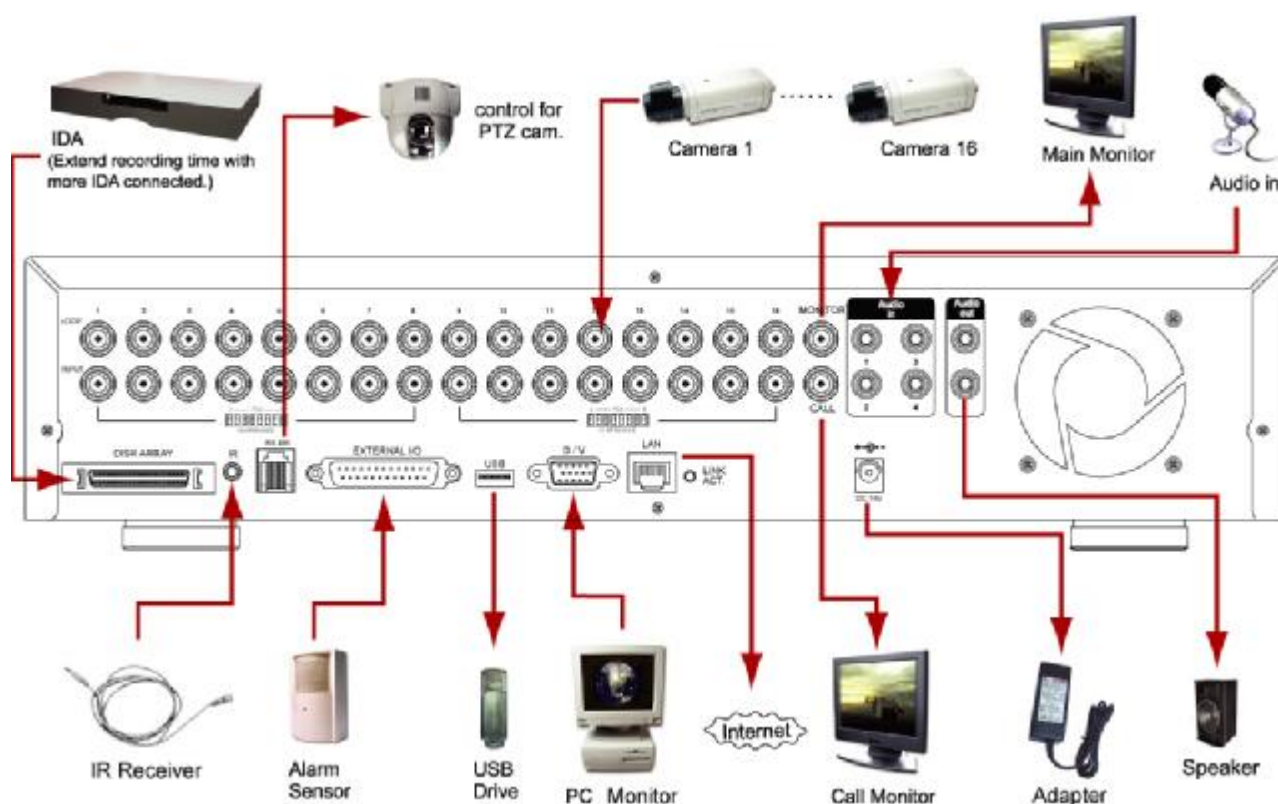

2.2 GETTING STARTED

- 1) Before using the DVS, please have the HDDs installed ready. (refer to Appendix #1 for installation of HDDs).
- 2) Connect the AC Power Cord to Power Adapter and plug into an electrical outlet. The Standby LED light will turn to red. Press the Power button. The POWER LED will be red. It takes approximately 10 to 15 seconds to boot the system with the message : “ SYSTEM INIT. ”, “HDD DETECTING”, and “HDD DETECTED”.
- 3) Before operating the DVS, please set up the system time first. (for setting system time, please refer to “DATE” settings).

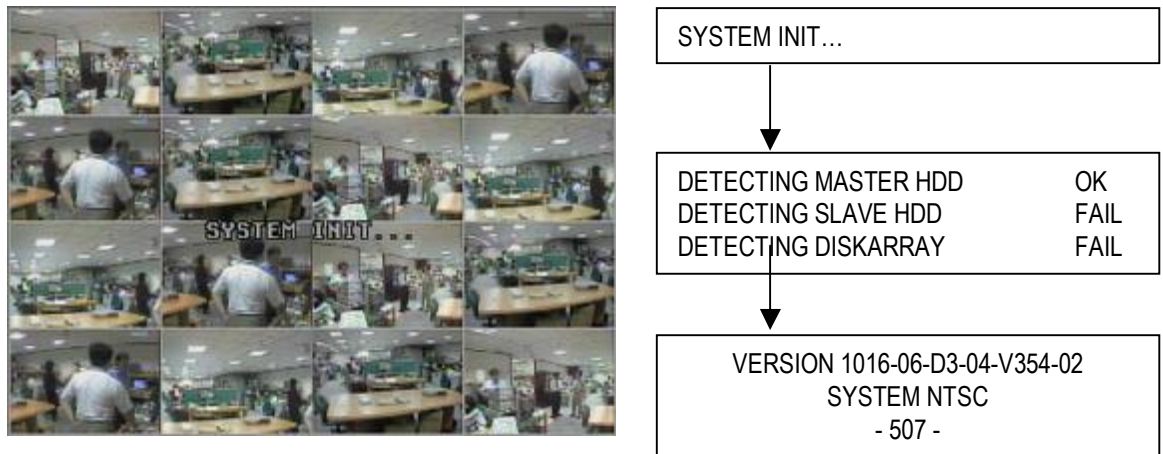

System Time

Available Capacity of Internal HDDs

Under HDD Overwrite Mode

Channel Title

NOTE :
When “HDD not found” message shows up, please refer to [appendix # 1](#). It may result from the improper installation of the HDD.

ADVANCED DESIGN

“Advanced Motion Detection Setting” allows users to adjust different sensitivity factors base on different environment. And “Quick Event Search” allows users to examine the setting of motion detection factors. In this way, users can use specific motion detection setting to capture every important image.

3.1 MOTION DETECTION SETTING

- ❑ LS : The sensitivity of comparing two different images. The smaller the value is, the more sensitive the detection will become.
Application ~
 - * Environment vibration
 - * Shadow
 - * Light shift
 - * Mirror reflection

- ❑ SS : The sensitivity towards the size of the triggered object on the screen. The smaller the value is, the more sensitive the detection will become.
Application ~
 - * Different size of the object on the screen.

- ❑ TS : The sensitivity towards how long the object gets triggered. The smaller the value is, the more sensitive the detection will become.
Application ~
 - * Different speed of the moving object

- ❑ RE : The value of RE is a reference for detection. The default value is 10, which means DVR will compare 10 continuous images at one time according to the sensitivity of LS, SS, TS simultaneously. Therefore the bigger the value is, the more sensitivity the detection will become.
Application ~
 - * Slow and regular environment change

Scenario : Warehouse

Different environments may require different settings, the sample below is for your reference.

	LS	SS	TS	RE
Entrance	10	2	2	10
Back door	8	1	2	10
Sidewalk	5	2	2	10
Widow	12	2	10	10

- ❖ Note 1 : The real appropriate setting value will depend on the real situation (such as the angle of the lens, the distance between the camera and object...etc.)
- ❖ Note 2 : User could also refer to “[Section 5.8 Advance Menu Detection](#)” for detail setting.

3.2 QUICK EVENT SEARCH

When finishing the setup of the motion detection, users could simply use the quick event search to examine the setting. There is a simple example for you to understand the principle.

For example, Motion detection area: see as the following illustration picture. Motion detection factors: LS:10; SS:1; TS:3; RE:10
Alarm duration: 5 seconds.



After recording for a period of time, users could use quick event search to playback the motion trigger recording files, then users will see the second hands swing between the number “12” and “1” on the clock.

BASIC OPERATION


4.1 RECORDING

The DVS offers three recording modes, manual record, event recording, and timer record. If power is off accidentally, recorded video files will still be stored in the HDDs. DVS will return to original recording status after power is on again.

- MANUAL RECORDING** (continuous recording) :
Recording is initiated by manually pressing the REC button.
Indicated by the sign “●”
- EVENT RECORDING** (triggered by motion and external alarm) :
When this functions is activated,
the recording is triggered by motion or external alarm.
Indicated by the sign “M” and “A” .
- TIMER RECORDING** (scheduled time) :
Recording is scheduled by Timer. Indicated by the sign “**TIMER RECORD**”.

NOTE :

When the HDDs are full under O/W Recording mode, previous recorded files may be overwritten without further warning notices.

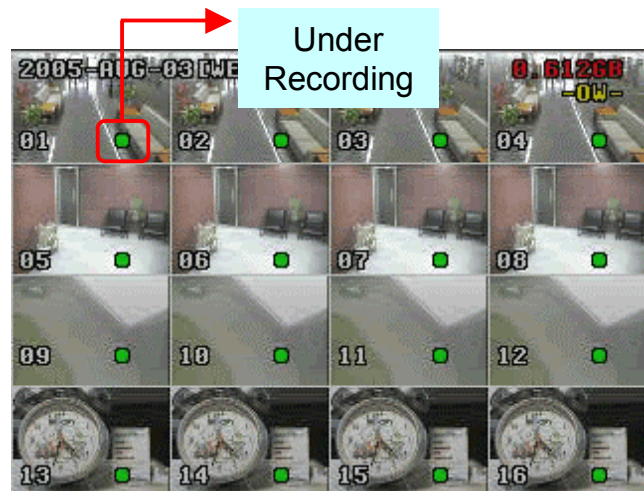

4.2 PLAYBACK

Press "PLAY" button, the DVS will display the last recording video.

1) **FAST FORWARD (F.F.) & FAST REWIND (REW):**

You can increase speed for Fast Forward and Rewind on the DVS.

In the Playback mode,

* Press "▶▶" once to get 4X speed forward and press twice to get 8X speed, ... and the maximum speed can reach 32X.

* Press "◀◀" once to get 4X speed rewind and press twice to get 8X speed, ... and the maximum speed can reach 32X.

* The type of recording image size (Frame, Field, or CIF) will also be shown on the screen.

2) **PAUSE / IMAGE JOG:**

Press "■" button to pause the current image displayed on the screen.

In the Pause mode,

* Press "▶▶" once to get forward by frame change.

* Press "◀◀" once to get rewind by frame change.

3) **STOP:**

Press "■" button under all circumstances, it will return DVS to live monitoring mode.

4) **CHANNEL SHIFT:**

* Display mode:

Press MODE "  " button to select display mode (16 / 9 / 4 channels).

* Full Screen Switch:

Press "+" or "-" button to show the full screen channels.

* Channel display switch:

Press " **SHIFT** " + " **SET** " button,

Press "▲" "▼" "◀" "▶" to select the channel which you would like to change.

Press "+" or "-" select the channel which you would like to show.

Press "ENTER" button to confirm.

5) **SLOW PLAYBACK:**

Press " **SHIFT** " + " **SLOW** " button to get 1/4X speed playback and press twice to get 1/8X speed, three times to get 1/16X speed, and four times to get 1/32X speed.

6) **AUDIO:**

Press " **SHIFT** " + " **AUDIO** " to select live sounds of the 4 audio channels.

* AUDIO 1 (L)


* AUDIO 2 (L)

* AUDIO 3 (L)

* AUDIO 4 (L)

DETAILED MENU CONFIGURATION


5.1 MENU TREE

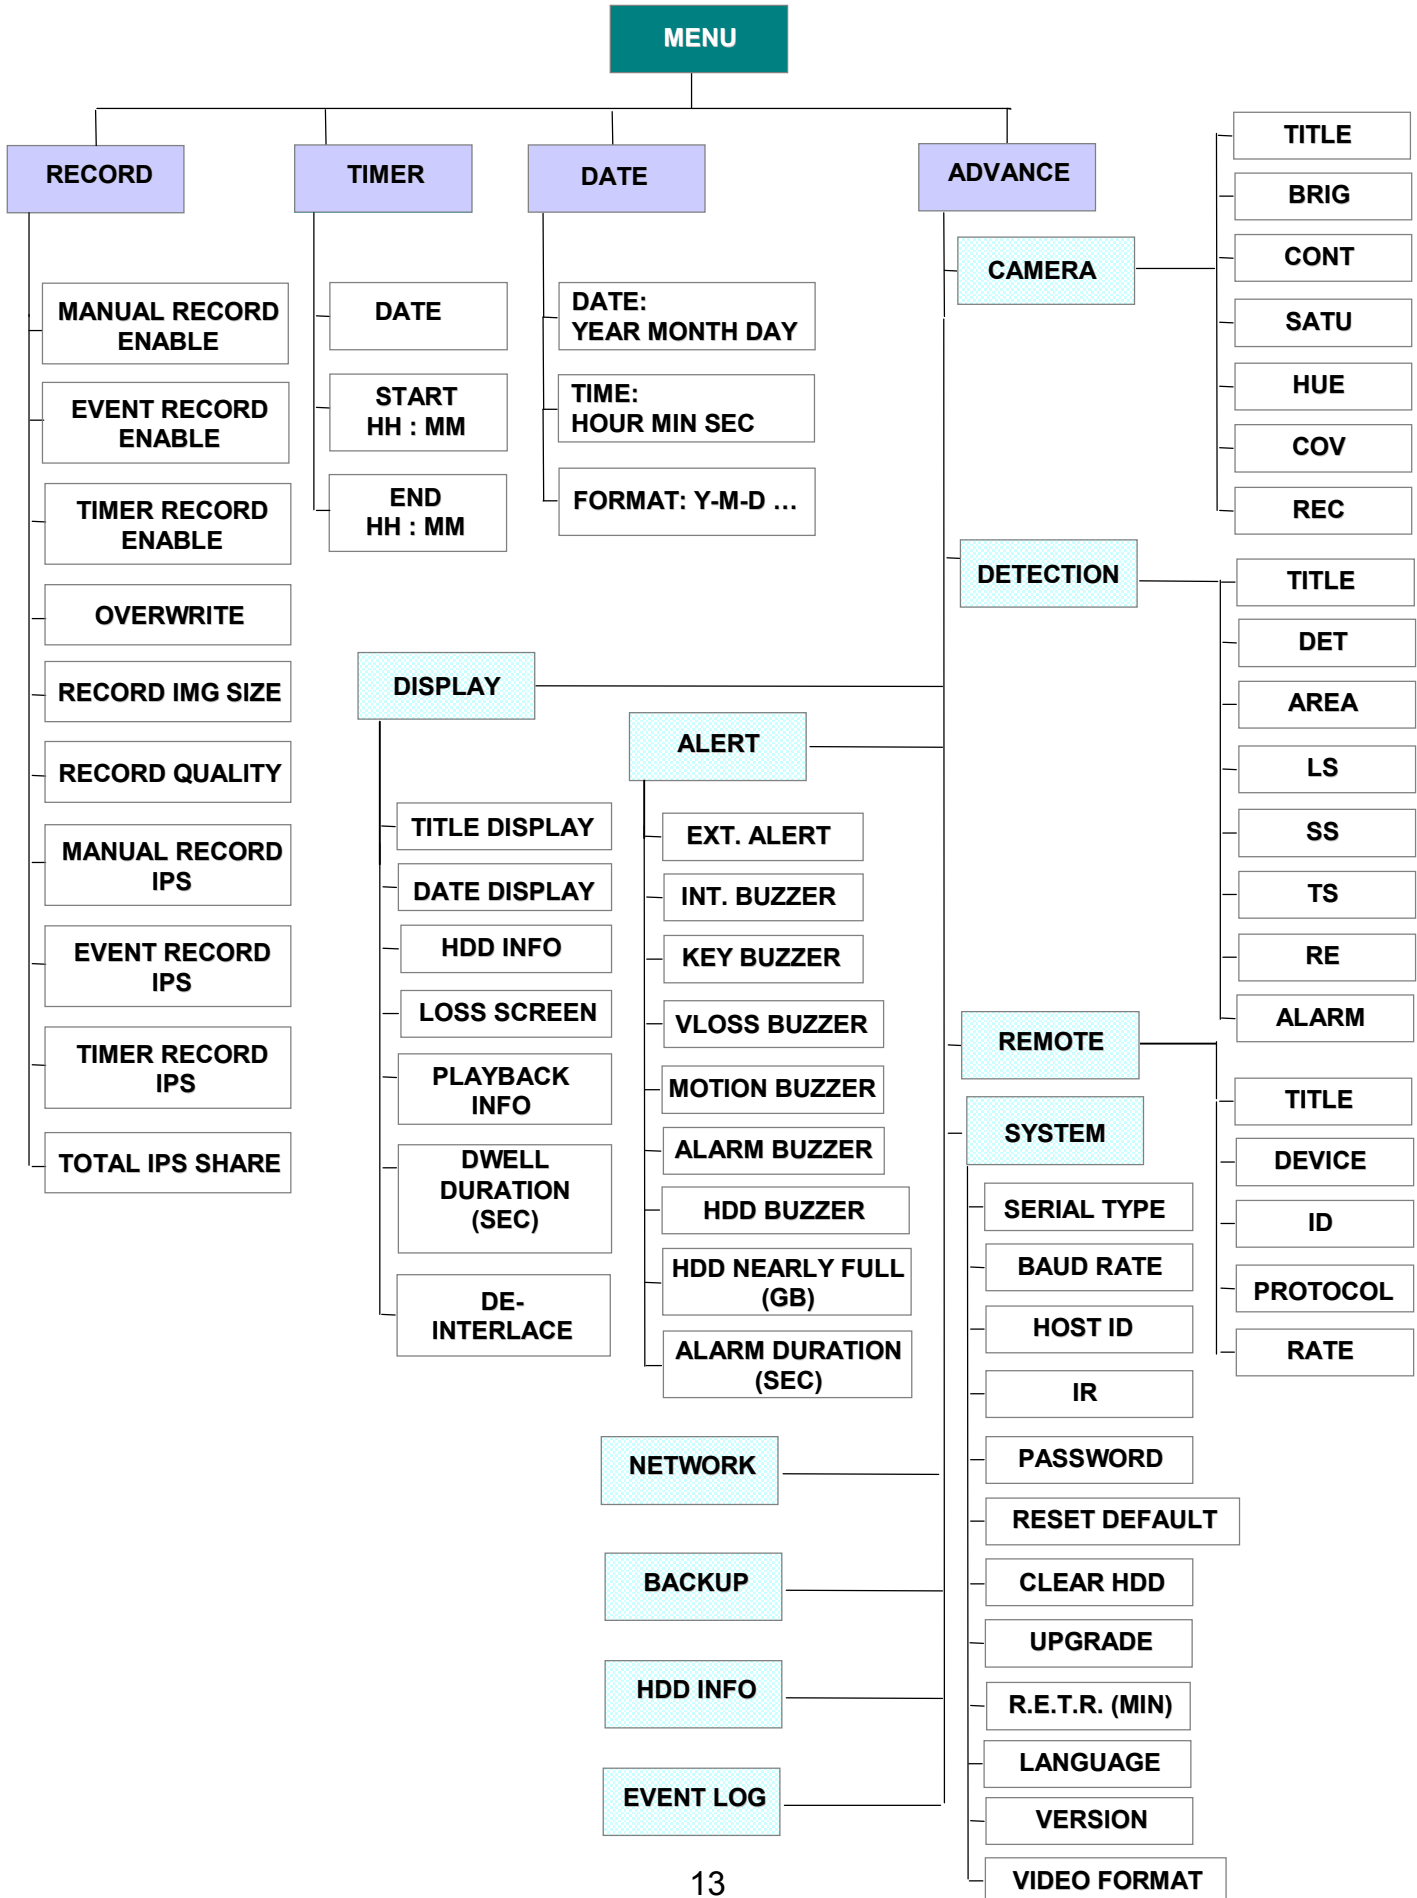

5.2 ACCESS MENU

Press "MENU" button to enter the main menu list. The default password is 0000. Enter the default password and press "ENTER". (You can alter the password later)

- * 0000 : press "ENTER" four times.
- * Press "+" or "-" to select the numbers (from 0 to 9).

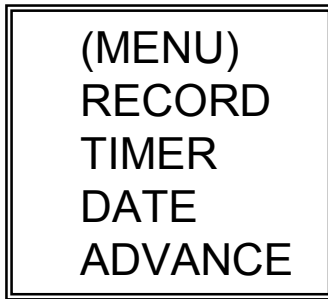


There are 4 options available in the Main Menu:

- RECORD ----- Record mode setup.
- TIMER ----- Timer recording setup.
- DATE ----- System date setup.
- ADVANCE ----- Advance Functions setup.


Use the following buttons for menu setting:

- " ▲ ▼ ◀ ▶ " to move the cursor.
- " + , - " to choose the numbers / selections.
- " ENTER " to go to the submenu / to confirm the selection
- " MENU " to go to the menu OSD
/ to confirm the change / to exit the menu OSD

5.3 MAIN MENU OPTIONS __ RECORD

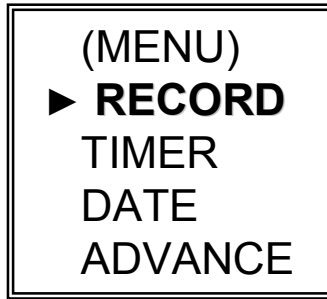

Move the cursor to the "RECORD", and press "ENTER", then the screen will show the following options.

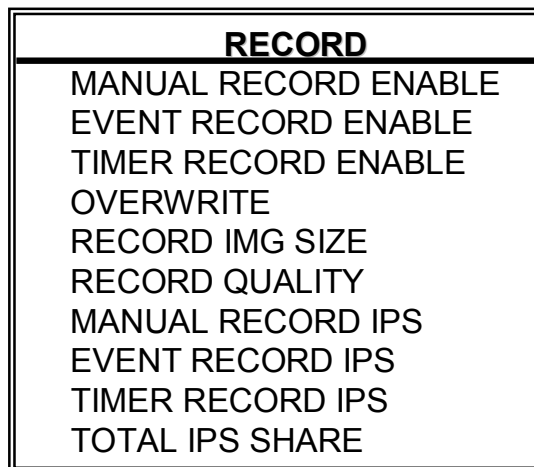

- 1) MANUAL RECORD ENABLE:
Start / Stop the manual recording function.
- 2) EVENT RECORD ENABLE:
Start / Stop the event recording function. When this functions is activated, the recording will triggered by motion or external alarm
- 3) TIMER RECORD ENABLE:
Start / Stop the timer recording function.
- 4) OVERWRITE:
Select to overwrite previous recording video in HDD. When the HDD is full under O/W recording mode, previous recorded files will be overwritten without further warning notices.
- 5) RECORD IMG SIZE:
There are three recording options: FRAME, CIF & FIELD. When change record image size, user need to stop recording first.
- 6) RECORD QUALITY:
There are four quality settings: BEST, HIGH, NORMAL & BASIC

In the following (7) ~ (10) sections is for 16 channels. For 8 channels, divided the IPS by 2.

- 7) MANUAL RECORD IPS:
Recording is activated by pressing the "REC" button. Select the images per second of MANUAL RECORD, The options are as the followings:
NTSC: FRAME: 120, 60, 30, 15 PAL: FRAME: 100, 50, 25, 12
 FIELD: 240, 120, 60, 30 FIELD: 200, 100, 50, 25
 CIF: 480, 240, 120, 60 CIF: 400, 200, 100, 50


- 8) EVENT RECORD IPS:
Recording is activated by event (alarm and motion trigger). Select the images per second of EVENT RECORD, The options are as the followings:
NTSC: FRAME: 120, 60, 30, 15 PAL: FRAME: 100, 50, 25, 12
 FIELD: 240, 120, 60, 30 FIELD: 200, 100, 50, 25
 CIF: 480, 240, 120, 60 CIF: 400, 200, 100, 50
- 9) TIMER RECORD IPS:
Recording is activated by timer schedule. Select the images per second of TIMER RECORD, The options are as the followings:
NTSC: FRAME: 120, 60, 30, 15 PAL: FRAME: 100, 50, 25, 12
 FIELD: 240, 120, 60, 30 FIELD: 200, 100, 50, 25
 CIF: 480, 240, 120, 60 CIF: 400, 200, 100, 50
- 10) TOTAL IPS SHARE:
There are two IPS settings:

FIX: IPS per channel = RECORD IPS ÷ 16 channels

GROUP: every 4 channels will form a group.
IPS per channel = RECORD IPS ÷ 4 ÷ number of channels under recording within the group.
Ex.: If you set the record IPS as 480 IPS, then
Channel 01 will get 120 IPS (480 / 4 / 1 = 120)
Channel 05 and 06 each will get 60 IPS (480 / 4 / 2 = 60)
“●” means under recording

● 01				Group 1 : CH 01 ~ 04
● 05	● 06			Group 2 : CH 05 ~ 08
				Group 3 : CH 09 ~ 12
				Group 4 : CH 13 ~ 16

5.4 MAIN MENU OPTIONS __TIMER

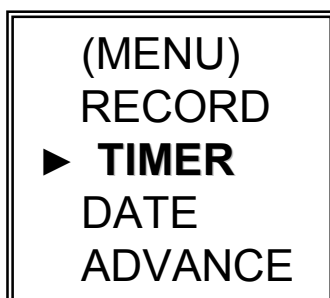


Move the cursor to the “TIMER”, and press ”ENTER”, then the screen will show the following options.

TIMER		
DATE	HH : MM	HH : MM
OFF	00 : 00	00 : 00
DAILY	08 : 00	18 : 00
SUN	06 : 00	23 : 00
MON-FRI	00 : 00	00 : 00
OFF	00 : 00	00 : 00
OFF	00 : 00	00 : 00
OFF	00 : 00	00 : 00

- 1) DATE:
 Select the day, or days of the week (SUN/MON/TUE/ WED/ THU/ FRI/ SAT/ MON-FRI / SAT-SUN / DAILY/OFF) that you plan to schedule the DVR to auto recording.
 NOTE 1 : Specific date could be changed by “+” or “-” buttons.
 NOTE 2 : If you plan to set the timer recording across the midnight, there are two ways for setting the timer recording schedule, please following the instructions below.
Example 1 : If you only want to set recording timer schedule from every Sunday 23:30 to Monday 23:30, then you could set Recording Timer Schedule as Sunday from 23:30 to 23:30.
Example 2 : If you plan to set the timer recording from Sunday 08:00 to Monday 15:00, then you could set the recording timer schedule as Sunday from 08 : 00 to 00 : 00, and Monday 00 : 00 to 15 : 00.
- 2) START HH / MM:
 Select the start time for the recording.
- 3) END HH / MM:
 Select the finishing time for the recording.

5.5 MAIN MENU OPTIONS __DATE

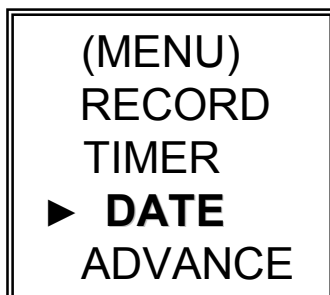

Move the cursor to the “DATE”, and press ”ENTER”, then the screen will show the following options.

DATE			
DATE	YEAR	MONTH	DAY
	2005	MAY	30
TIME	HOUR	MIN	SEC
	15	30	18
FORMAT	Y-M-D		

Set the correct time of the DVS.
 There are three FORMAT of date: Y-M-D, M-D-Y, D-M-Y.

NOTE: Press “+” “-” button to do the selections.

5.6 MAIN MENU OPTIONS __ ADVANCE

(MENU)
RECORD
TIMER
DATE
▶ ADVANCE

Move the cursor to the "ADVANCE", and press "ENTER", then the screen will show the following options.

ADVANCE
CAMERA
DETECTION
DISPLAY
ALERT
REMOTE
SYSTEM
NETWORK
BACKUP
HDD INFO
EVENT LOG

5.7 ADVANCE MENU __ CAMERA

Move the cursor to the "CAMERA", and press "ENTER", then the screen will show the following options.

CAMERA						
TITLE	BRIG	CONT	SATU	HUE	COV	REC
01	128	128	128	128	NO	YES
02	128	128	128	128	NO	YES
03	128	128	128	128	NO	YES
04	128	128	128	128	NO	YES
05	128	128	128	128	NO	YES
06	128	128	128	128	NO	YES
07	128	128	128	128	NO	YES
08	128	128	128	128	NO	YES
UP	DOWN					

- 1) TITLE:
Move the cursor to the title which you want to change the title, and press "ENTER" to go in the setting screen. Assign each channel a title (up to six characters (letters or symbols...)), the default title is the channel number.



- 2) BRIG / CONT / SATU / HUE:
Adjust the Brightness/Contrast/Saturation/Hue of each channel. The level is from 0 to 255. The default value is 128.
- 3) COV (COVERT):
Select "YES" to mask the selected channel which is under recording.
- 4) RECORD:
Select "YES" to enable the record function; Select "NO" to disable the record function.
- 5) UP / DOWN:
Select "UP" to go to the previous page; Select "DOWN" to go the next page.

NOTE:


TITLE : 6 characters (letters or symbols...)
 BRIG : from 0 ~ 255, the default value is 128.
 CONT : from 0 ~ 255, the default value is 128.
 SATU : from 0 ~ 255, the default value is 128.
 HUE : from 0 ~ 255, the default value is 128.
 CONV : YES or NO.
 REC : YES or NO.

5.8 ADVANCE MENU __ DETECTION

Move the cursor to the "DETECTION", and press "ENTER", then the screen will show the following options.

DETECTION							
TITLE	DET	AREA	LS	SS	TS	RE	ALARM
01	ON	SETUP	07	03	02	10	OFF
02	ON	SETUP	07	03	02	10	LOW
03	ON	SETUP	07	03	02	10	HIGH
04	ON	SETUP	07	03	02	10	OFF
05	ON	SETUP	07	03	02	10	OFF
06	ON	SETUP	07	03	02	10	OFF
07	ON	SETUP	07	03	02	10	OFF
08	ON	SETUP	07	03	02	10	OFF
UP	DOWN						


- 1) TITLE:
Show the title of each channel of the camera.
- 2) DET:
Select "ON" to activate the motion detect function of each channel.
Select "OFF" to inactivate the motion detect function of each channel.
- 3) AREA:
Press the "ENTER" button to set detection area.
In this function, the default setting is un-detecting any area. Pink blocks represent the area that is not being detected. While the transparent blocks is the area that is under detection.

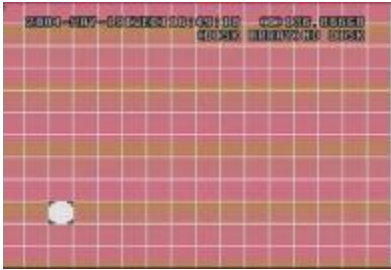


Press "ENTER" to confirm the start area



Press ◀ or ▶ to choose the width of the area

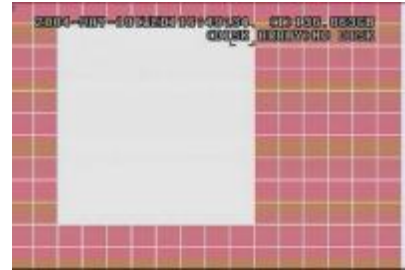

Press ▲ or ▼ to choose the height of the area, and press "ENTER" again to confirm.

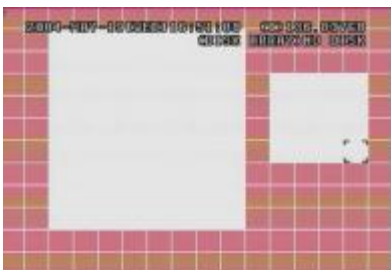

You can have multi-detected area



Press "-" to turn all area under detection



Press "+" to turn all area not to be detected

▲ ▼ ◀ ▶ : navigates between targets.

- 4) LS :
The sensitivity of comparing two different images. The smaller the value is, the higher sensitivity for motion detection.
The highest sensitivity setting is 00, the lowest sensitivity setting is 15.
The default value is 07.
- 5) SS :
The sensitivity towards the size of the triggered object on the screen.(the number of motion detection grids). The smaller the value is, the higher sensitivity for motion detection.
The highest sensitivity setting is 00, and the lowest sensitivity setting is 15. The default setting is 03.

Note: The default setting of Spatial Sensitivity is 03, which means when 3 grids are detected for motion at one time, the system will get triggered. So the value of Spatial Sensitivity must be less than the number of grids which you set up to motion detection area.

- 6) TS :
The sensitivity towards how long the object gets triggered. The smaller the value is, the higher sensitivity for motion detection.
The highest sensitivity setting is 00, and the lowest sensitivity setting is 15.
The default setting is 02.
- 7) RE :
The value of RE is a reference for detection. The default value is 10, which means DVR will compare 10 continuous images at one time according to the sensitivity of LS, SS, TS simultaneously. Therefore the bigger the value is, the higher sensitivity for motion detection.
- 8) ALARM:
Select LOW / HIGH for the alarm polarity. The default alarm value is OFF.
- 9) UP / DOWN:
Select "UP" to go to the previous page; Select "DOWN" to go the next page.
Targets set in the AREA.

5.9 ADVANCE MENU DISPLAY

Move the cursor to the "DISPLAY", and press "ENTER", then the screen will show the following options.

DISPLAY	
TITLE DISPLAY	ON
DATE DISPLAY	ON
HDD INFO	ON
LOSS SCREEN	BLUE
PLAYBACK INFO	NORMAL
DWELL DURATION (SEC)	2
DE-INTERLACE	ON

- 1) TITLE DISPLAY:
Turn the camera title display on / off.
- 2) DATE DISPLAY:
Turn the date display on / off.
- 3) HDD INFO"
Turn the information of internal HDD and DISK ARRAY display on / off.
- 4) LOSS SCREEN"
Set the color of video loss screen (Blue or Black)
- 5) PLAYBACK INFO:
Set the position where PLAYBACK INFO will be indicated (center or normal (on the button of left-hand side of the screen)).

- 6) DWELL DURATION (SEC):
Set the duration time of each camera for CALL MONITOR (2, 4, 8, 16 sec.)
- 7) DE-INTERLACE:
Set the “DE-INTERLACE” function on / off (Under Developing).

5.10 ADVANCE MENU ALERT

Move the cursor to the “BUZZER”, and press ”ENTER”, then the screen will show the following options.

ALERT	
EXT. ALERT	ON
INT. BUZZER	ON
KEY BUZZER	ON
VLOSS BUZZER	ON
MOTION BUZZER	ON
ALARM BUZZER	ON
HDD BUZZER	ON
HDD NEARLY FULL (GB)	05
ALARM DURATION (SEC)	05

- 1) EXT. ALERT:
Set the sound on / off when external alarm is triggered.
- 2) INT. BUZZER:
Set the sound of KEY / VLOSS / MOTION / ALARM / HDD FULL on or off.
- 3) KEY BUZZER:
Set the sound on / off when pressing the button.
- 4) VLOSS BUZZER:
Set the sound on / off when video loss happened.
- 5) MOTION BUZZER:
Set the sound on / off when motion alarm triggered.
- 6) ALARM BUZZER:
Set the sound on / off when internal alarm triggered.
- 7) HDD BUZZER:
Set the sound on / off when the HDD is full.
- 8) HDD NEARLY FULL (GB):
If HDD buzzer is on, you could choose to have a buzzer notification when the HDD available capacity is only xxx GB left.
- 9) ALARM DURATION (SEC):
Press “ENTER” or “+” or “-” button to set the duration time of alarm recording (5, 10, 20, 40 sec.).

5.11 ADVANCE MENU ___ REMOTE

Move the cursor to "REMOTE", and press "ENTER", then the screen will show the following options.

REMOTE				
TITLE	DEVICE	ID	PROTOCOL	RATE
01	PTZ	001	P - D	02400
02	CAMERA	002	NORMAL	02400
03	CAMERA	003	NORMAL	02400
04	CAMERA	004	NORMAL	02400
05	CAMERA	005	NORMAL	02400
06	CAMERA	006	NORMAL	02400
07	CAMERA	007	NORMAL	02400
08	CAMERA	008	NORMAL	02400
UP	DOWN			

- 1) TITLE:
Title of each camera.
- 2) DEVICE:
Select to control normal camera or PTZ camera for each channel.
- 3) ID:
Set the ID number (0 ~ 255) as same as the ID of each device.
- 4) PROTOCOL:
Select NORMAL or PELCO-D protocol.
- 5) RATE:
Set the baud rate of each channel (2400, 9600, 19200, 57600).

5.12 ADVANCE MENU __ SYSTEM

Move the cursor to the "SYSTEM", and press "ENTER", then the screen will show the following options.

SYSTEM	
SERIAL TYPE	RS - 485
BAUD RATE	02400
HOST ID	003
IR	ON
PASSWORD	0000
RESET DEFAULT	RESET
CLEAR HDD	MASTER
UPGRADE	NO
R.E.T.R. (MIN)	3
LANGUAGE	ENGLISH
VERSION	1015-06-D2-04-V354-01
VIDEO FORMAT	NTSC

- 1) SERIAL TYPE:
Press "ENTER" or "+" or "-" button to set the control serial type (RS-485, RS-232) of DVR.
- 2) BAUD RATE:
Press "ENTER" or "+" or "-" button to set the BAUD RATE of DVR (2400, 9600, 19200, 57600).
- 3) HOST ID:
Press "ENTER" or "+" or "-" button to set the ID of DVR (0 ~ 255).
- 4) IR:
Press "ENTER" or "+" or "-" button to set the IR function on / off.
- 5) PASSWORD:
Press "ENTER" or "+" or "-" button to set the password for accessing DVR.
- 6) RESET DEFAULT:
Press "ENTER", and select "YES" to confirm or "NO" to cancel.
- 7) CLEAR HDD:
Press "ENTER", and "YES" to confirm clear HDD or "NO" to cancel.
In this function, you can press "+" or "-" to select the HDD MASTER HDD, SLAVE HDD or DISK ARRAY) which you plan to clear.
- 8) UPGRADE:
Press "ENTER", and select "YES" to confirm upgrade or "NO" to cancel.
- 9) R.E.T.R. (MIN):
Set R.E.T.R. activated time (3, 5, 10 minutes after confirm the setting).
* R.E.T.R. activate ~ Press "Menu" + "-" buttons on the front panel.
When the R.E.T.R. is on, a red R.E.T.R. will be shown on the screen.
* R.E.T.R. off ~ Press any key and enter the password.

- 10) LANGUAGE:
Press "ENTER", and select the language of the OSD.
- 11) VERSION:
The firmware version information will be shown on the screen.
- 12) VIDEO FORMAT:
The information of the DVR's video format will be shown on the screen.

5.13 ADVANCE MENU NETWORK

Move the cursor to the "SYSTEM", and press "ENTER", then the screen will show the following options.

NETWORK	
NETWORK TYPE	STATIC
DNS	<u>61.</u> <u>66.</u> <u>138.</u> <u>53</u>
PORT	<u>0080</u>

Use the following buttons for menu setting:

"▲ ▼" to move the cursor.

"+ , -" to choose the numbers / selections.

"ENTER" to go to the submenu / to confirm the selection

"MENU" to exit the menu OSD

- 1) NETWORK TYPE:
Move the cursor to NETWORK TYPE, and press "+" or "-" button to choose the network type (STATIC, DHCP, PPPOE), and then press "ENTER" to go to the submenu of the network. Use "+" or "-" button to set all the information needed in the DVS. For example, static IP.

STATIC	
IP	<u>61.</u> <u>66.</u> <u>138.</u> <u>53</u>
GATEWAY	<u>61.</u> <u>66.</u> <u>138.</u> <u>65</u>
NETMASK	<u>255.</u> <u>255.</u> <u>255.</u> <u>0</u>

5.14 ADVANCE MENU ____ BACKUP

Move the cursor to the "SYSTEM", and press "ENTER", then the screen will show the following options.

BACKUP
USB BACKUP

Select "USB BACKUP" and then press "Enter".

USB BACKUP	
TIME	2005-05-30 13 : 30 : 50
BACKUP SIZE	0000 MB
AVAILABLE SIZE	0000 MB
CHANNEL	01
HDD NUM	MASTER
BACKUP TO USB	START

- 1) TIME:
Select the start time of the backup.
- 2) BACKUP SIZE:
Set the size of the backup file.
- 3) AVAILABLE SIZE:
The information of the USB available capacity.
- 4) CHANNEL:
Choose the channel.
- 5) HDD NUM:
Choose the HDD.
- 6) BACKUP TO USB:
Press "ENTER" to start backup the chosen file to USB.

NOTE:

- ① The USB format must be "FAT 32".
- ② It is suggest that clear all the files in the USB before you backup files in your USB.

5.15 ADVANCE MENU __HDD INFO

You can get all the capacity information of the connected HDD.

HDD INFO			
HDD NUM	HDD SIZE	HDD NUM	HDD SIZE
MASTER	400.517	SLAVE	NOHDD
EXT001	400.517	EXT002	400.517
EXT003	400.517	EXT004	NO HDD
EXT005	NO HDD	EXT006	NO HDD
EXT007	NO HDD	EXT008	NO HDD
EXT009	NO HDD	EXT010	NO HDD
EXT011	NO HDD	EXT012	NO HDD

5.16 ADVANCE MENU __EVENT LOG

You can get all the information (event type, time, and channel) of the event list (including video loss list, net list, other lists (such as power on / off, key unlock, reset to default). Select the event list you want to see and press "ENTER".

EVENT LOG	
VLOSS	LIST
NET	LIST
OTHERS	
CLEAR	ALL

- 1) VLOSS LIST:
Show the information of video loss list.
- 2) NET LIST:
Show the information of net login list.
- 3) OTHERS:
Show the information of power on / off, unlock, reset to default list.

ADDITIONAL OPERATION

6.1 SEARCH

Press “**SHIFT**” + “**SEARCH**” buttons on the front panel of the DVR to enter the search mode. Then the screen will show the following options.

SEARCH	
HDD	MASTER
FULL	LIST
RECORD	LIST
SYSTEM	LIST
ALARM	LIST
MOTION	LIST
TIME	SEARCH


- 1) HDD:
Select the the specific HDD.
- 2) FULL LIST:
List all recorded files
(R: RECORD / S: SYSTEM / A: ALARM / MS: MOTION / T: TIMER).
- 3) RECORD LIST:
Search among the list of manual recorded files.
- 4) SYSTEM LIST:
Search among the list of system recorded files.
Note: Under continuous recording, the DVR system will save one recording file every one hour.
- 5) ALARM LIST:
Search among the list of alarm trigger recorded files.
- 6) MOTION LIST:
Search among the list of motion trigger recorded files.
- 7) TIME SEARCH:
Search by specific time period (YEAR / MONTH / DAY / HOUR / MIN).

NOTE:

Move the cursor to the specific recorded file and press “ENTER” to play the video, and press stop “■” button to return the live display.

6.2 2X DIGITAL ZOOM

Press “ZOOM” button on the front panel of the DVR to enlarge the picture of selected channel (2X digital zoom). You will have ¼ view size of the enlarged picture. Therefore use the ▲ ▼ ◀ ▶ to navigate.

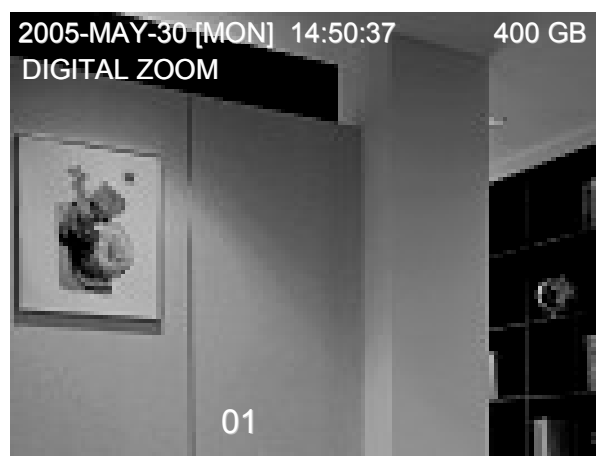

- ❖ Press the “ZOOM” button again to exit the zoom picture.
- ❖ Press “▲ ▼ ◀ ▶” button to move the zoom position.
- ❖ Users could also press the “Digital Zoom” button on the IR remote control panel. Please refer to “Appendix #3”.

6.3 KEY LOCK

- ❖ Press “MENU” + “ENTER” to key lock.
- ❖ Press any key and then key in the password to exit Key Lock mode.
- ❖ As to the password setting, please refer to “Section 5.12 ADVANCE MENU SYSTEM”.


6.4 SWITCH THE N/P SYSTEM

- ❖ Press “POWER” button to shutdown, and then press “POWER” + “▶” to switch to PAL system.
- ❖ Press “POWER” button to shutdown, and then press “POWER” + “◀” to switch to NTSC system.

6.5 USB UPGRADE

Users can use USB for upgrade. Please format the USB memory device first.

- 1) Get the upgrade files from your distributor.
- 2) Save the upgrade files in your USB device (Do not change the file name).
- 3) Go to the "MAIN MENU – SYSTEM - UPGRADE", and press "ENTER".
- 4) Select "YES", and press "ENTER" again to confirm upgrade.

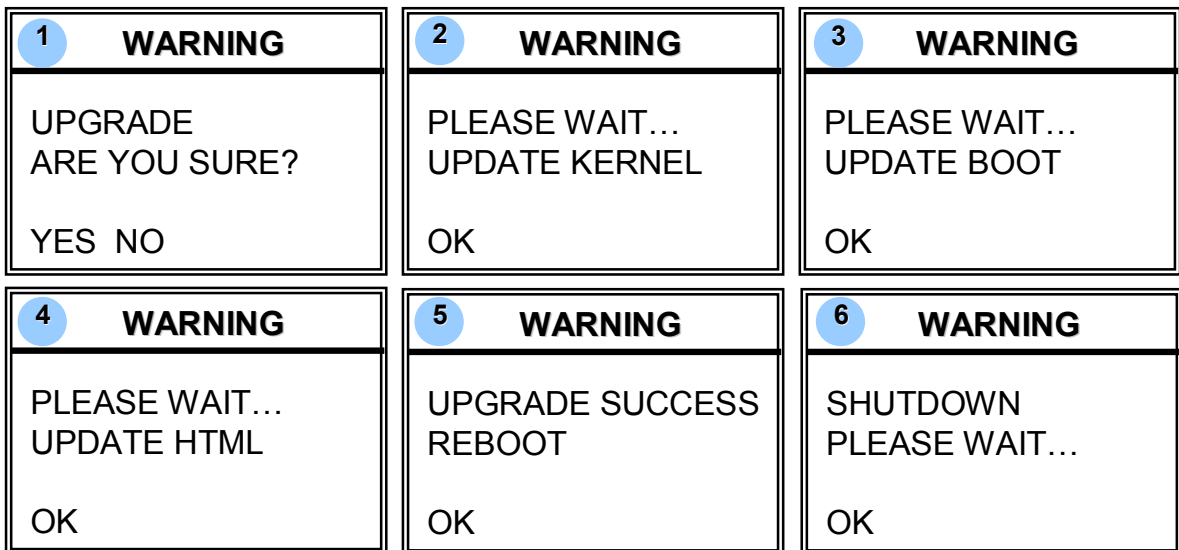


NOTE:



- ① The USB format must be "FAT 32".
- ② If the USB is not supported by the DVR, then the "USB ERROR" message will be shown on the screen.
- ③ The file type of the backup files could only use the licensed software to view the playback.

6.6 LICENSED SOFTWARE AP



- 1) Install the software:
 - ① Put the attached CD into a CD-ROM and it will start to install application program into PC.
 - ② Click setup icon twice.

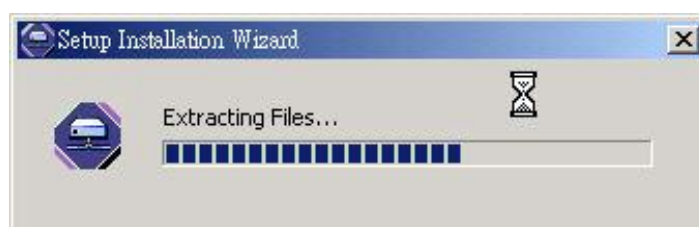


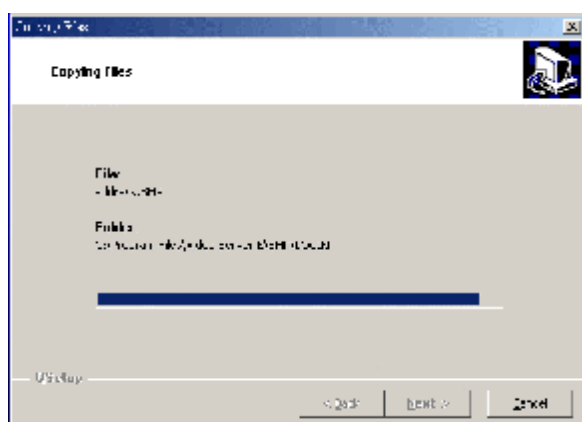
- ② Press "Next".
- ③ Choose destination location and press "Next".

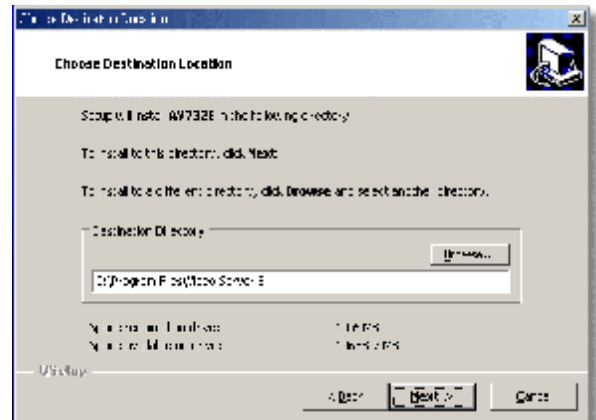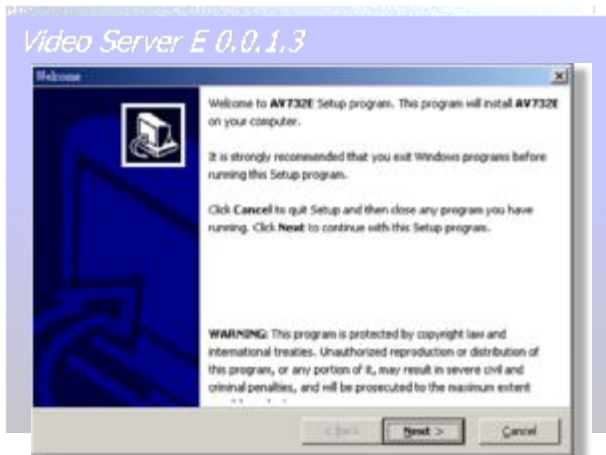


- ④ Set program shortcuts and press "Next".
- ⑤ Confirm setup settings and press "Next" to begin copying files.

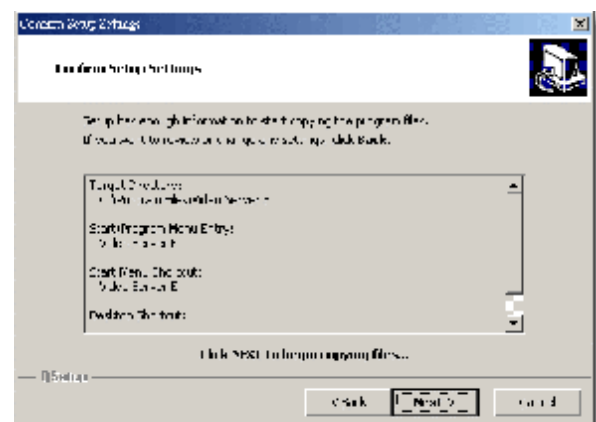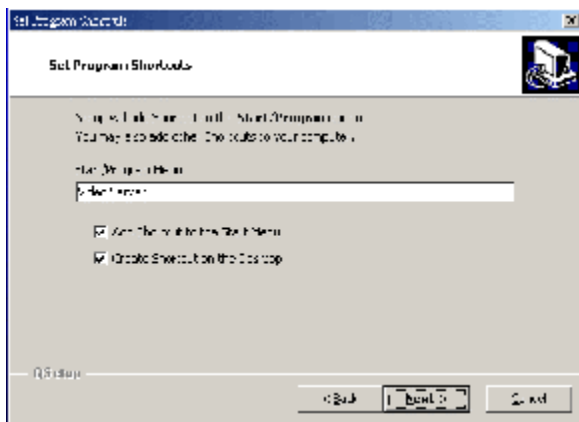

- ⑥ Click "Finish" button to complete the setup. And you will see the icon "  " on the desktop.



2) Software Operation:

- ① Click  twice to enter Login page.
- ② Method 1 ~
Local setting :
The default DVR IP is “192.168.1.10”, and default “user name” and “password” are both “admin”. Users could use “IP:192.168.1.___ (1~255, except 10)”, “user name: admin”, and “password: admin” to connect with DVR. After connect with the DVR, users could modify these network setting of the DVR.
- ③ Method 2 ~
Set the Network information in the DVR and connect to DVR via Internet :
Please refer to “Section 5.13”.
- ④ In the login page, key in “User Name”, “ Password”, and “IP” (Static IP) or “Host name” (Dynamic IP). Click the green button to connect.
The illustration below, take IP address 219.85.22.168 as an example.



⑤ LOGIN AP Icon Explanation.



Address Book: You can press this button to add a new IP into the IP Address Book or choose any preset IP address to access the Video Server.



Search: Search available DVR IP address and modify the network setting of the DVR.



Player: You can press this button to access and play the recorded files saved in your PC.




Copy: You can press this button to copy all the software installation files, so you could keep all the settings of video web server for next software installation on other PC.

NOTE:


UDP: Suitable for stable network with higher bandwidth.



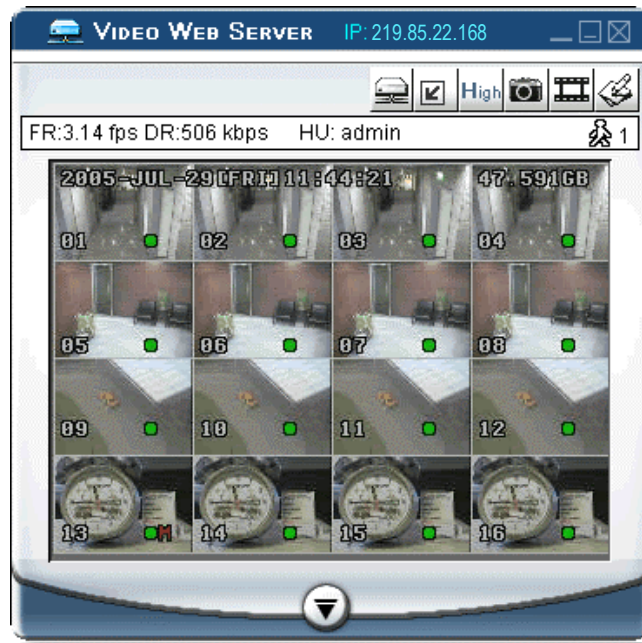

TCP: Suitable for unstable network with lower bandwidth.



- ⑥ If you see the video screen as below, means that you have been successfully connected.

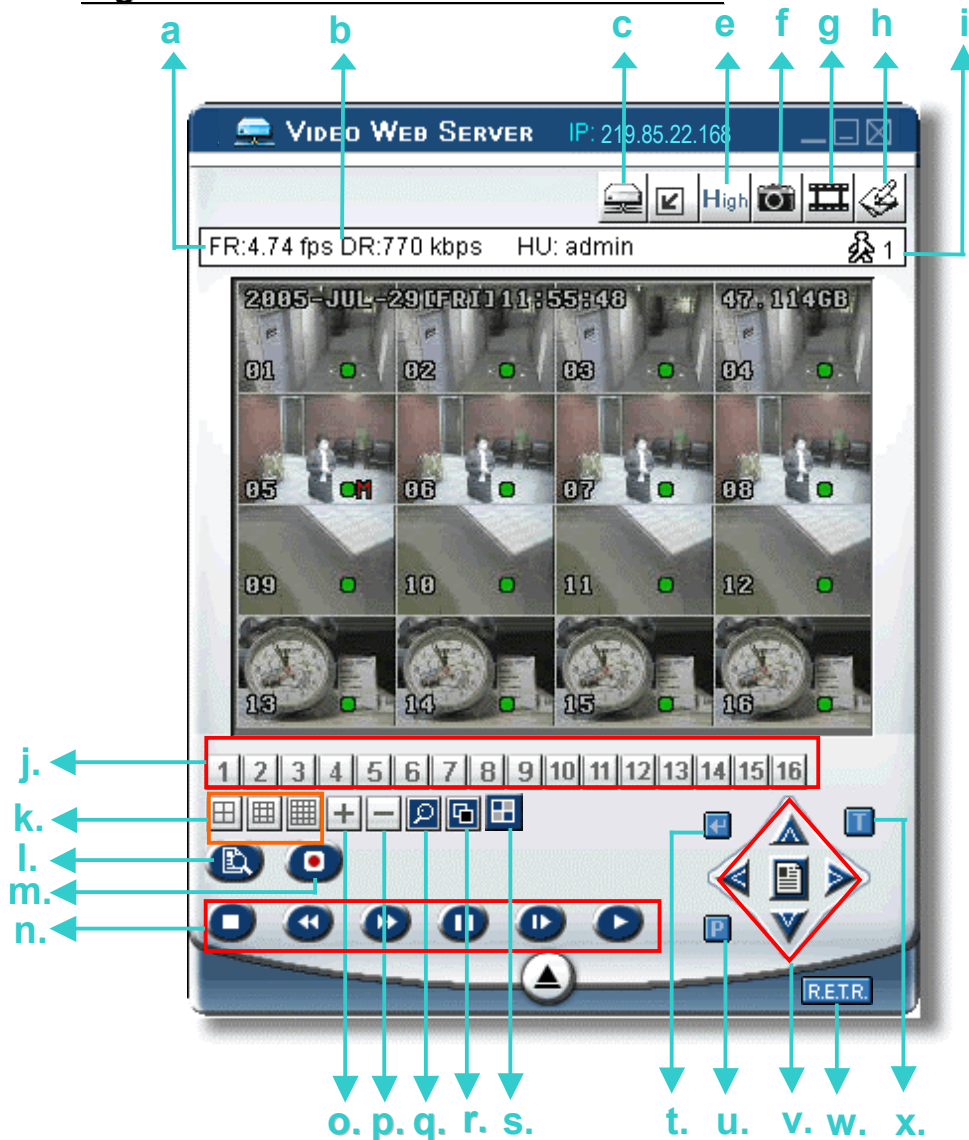

- ⑦ Introduction of Basic Operation : Video Web Server Control Panel.
Digital Device Control Panel ~ 16CH DVR



- a. Image Transfer Rate Per Second
- b. Data Transfer Rate
- c. Connect / Disconnect
- d. Resolution:
 NTSC: 320 × 228  ; 640 × 456 
 PAL: 320 × 276  ; 640 × 552 
- e. Image Quality (High, Medium, Low)
- f. Snapshot : press this button to have a snapshot of the image which will be saved in the designated destination.
- g. Record : press this button, the video web server will start to record, and press this button again to stop record. The recording files will be saved to PC. Each recording file can up to 18,000 frames. When the recording file capacity is full, the new recorded file will be saved to the second file.
 Besides, if the HDD space is less than 200MB, the program will stop recording.
- h. System Config: press this button to enter the setting page of the video web server.
- i. Number of Online Users
- j. CH 1 ~ 16
- k. 4, 9, 16 Channel Display
- l. Search
- m. Record
- n. Stop / Fast Rewind / Fast Forward / Pause / Slow Playback / Play
- o. +
- p. -
- q. Digital Zoom
- r. Set : press this button to change channel display position.
 Press “▲ ▼ ◀ ▶” to select the channel which You would like to change.
 Press “+” or “-” select the channel which You would like show.
 Press “Enter” button to confirm.
- s. Sequence: press this button to enter the call monitor function and press again to exit from call monitor mode.
- t. Enter
- u. PTZ Control Off / On:
 When you turn the PTZ control on, then you could select the PTZ device, and press “OK” button to enter the PTZ control AP screen.
 (Press “ESC” to exit from PTZ control AP screen and back to DVR control AP screen)

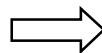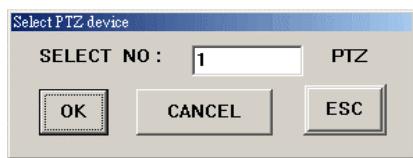

- v. Menu / Up / Down / Left / Right
- w. R.E.T.R. (Remote Event Trigger Recording) : press this button to activate the R.E.T.R function, and press again to exit. When R.E.T.R. is on, users at the remote PC side will get a real time alarm sound notification and the recording files will be save at different location in the PC according to the “Record Path” you set.
- x. Turbo Off / On

Digital Device Control Panel ~ PTZ




- j. Preset 1 ~ 16 Hot Point: You can control your PTZ camera screen to a specific point by using cursor.
- k. AUTO
- l. Zoom Tele Zoom Wide
- m. Focus Near Focus Far
- n. Max Zoom In Max Zoom Out
- o. Enter
- p. PTZ Control Off / On:
When you turn the PTZ control on, then you could select the PTZ device, and press "OK" button to enter the PTZ control AP screen. (Press "ESC" to exit from PTZ control AP screen and back to DVR control AP screen)
- q. Menu / Up / Down / Left / Right
- r. Turbo:
To speed up menu selecting or the control of the PTZ camera under video web server, you can activate "Turbo" function by clicking this button. Users are allowed to change the turbo steps from 1 to 10. .
Ex. If you activate the TURBO function, then when you press one of the button up/down/left/right, one mouse click will function as if you click 3 times.

⑧ Playback Operation.



- a. Snapshot
- b. Stop
- c. Pause
- d. Fast Rewind (1X, 2X, 4X, 8X, 16X)
- e. Slow Rewind (1X, 1/2X, 1/4X, 1/8X, 1/16X)
- f. PLAY (1X)
- g. Slow Playback (1X, 1/2X, 1/4X, 1/8X, 1/16X)
- h. Fast Forward (1X, 2X, 4X, 8X, 16X)
- i. OSD (show / hide)
- j. Config. Setting (File path for snapshot, text color, progress color, channel color)
- k. Open Previous File
- l. Open Next File

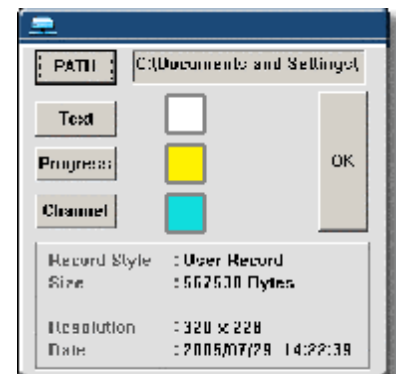


Note:

When you pause the playback picture, you could press “e” button to go to the previous image, or press “g” button to go to the next image.




3) Advanced Setting:



- Press “System Config  ” button to enter the system setting page.
- In this “System setting” page, you can select the function which you want to set up.
- After setting, please press “APPLY” button to save the settings.
- System setting includes:
Network, DDNS, Account, Online User, Alarm, Mail, FTP, Alarm Database, File Path, Device, Detection, Camera, and Toolbox.


Network

- ① Click on Network setting, and choose the IP TYPE (Static IP, PPPOE, DHCP)
- ② Static IP
- ③ PPPOE
- ④ DHCP

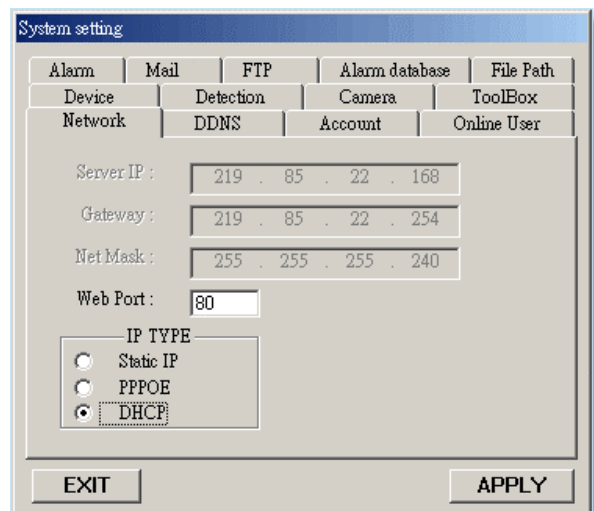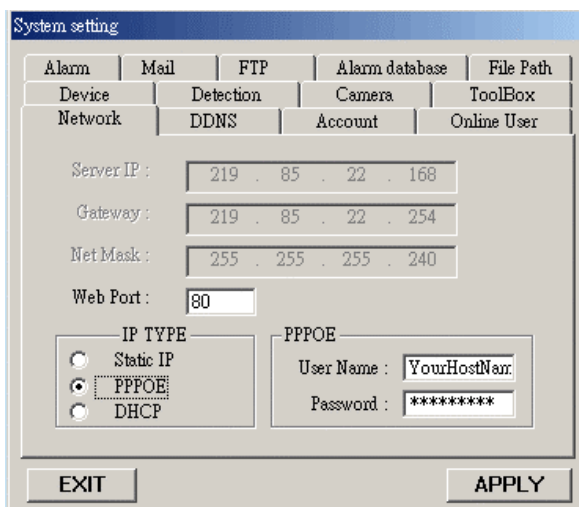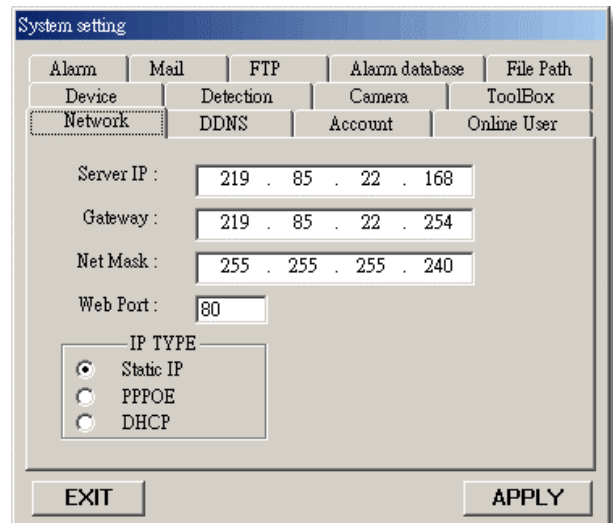




DDNS

- ① DDNS is a service for transforming web address to IP address.
- ② It only will be necessary when you have applied DDNS and use Dynamic IP for the Video Web Server.

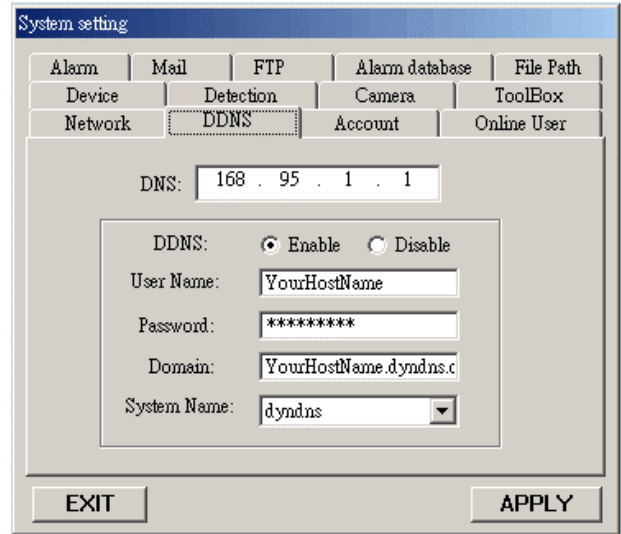


Account

- ① Set up the user's account (Max 5 accounts) , password, life time, and authority level (Max 5 accounts on line at the same time).
- ② User's level:
SUPERVISOR — Control all the functions (“a”, “b”, “c”, “d”, “e” and “f”).
HIGH — Control only “a”, “b”, “c”, “d” and “e” functions, but cannot control “f” function.
NORMAL — Control only “a”, “d”, and “e” functions, but cannot control “b”, “c” and “f” functions.
GUEST — Watch the image only. Can only use the “a” function.
- ③ Life time : According to different authority level, different accounts can stay online for different time period (1min, 5min, 10min, 1hour, 1day, infinity).

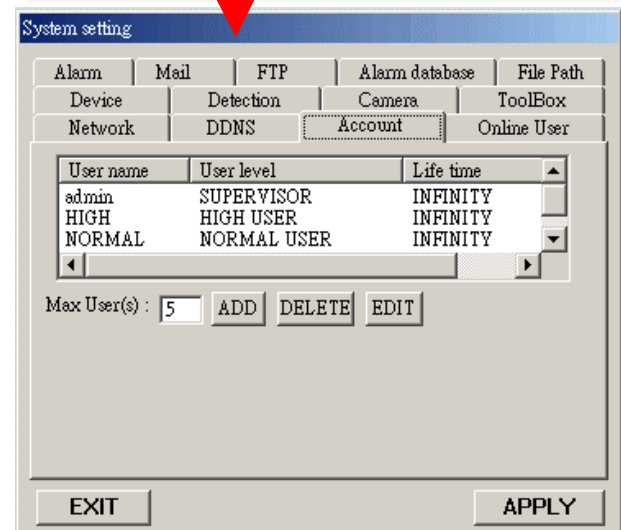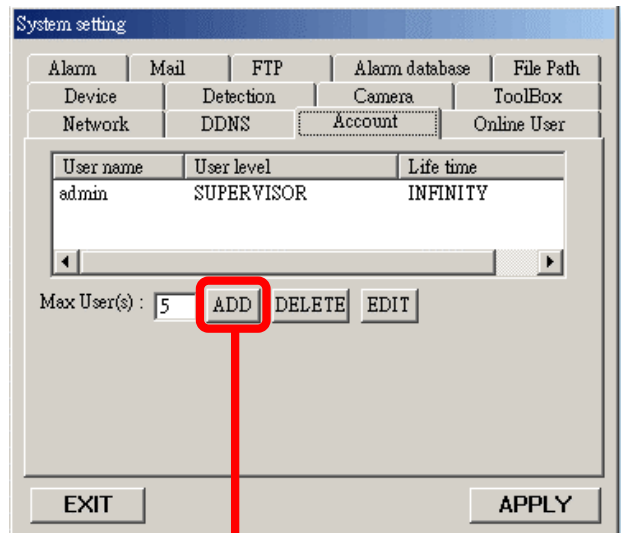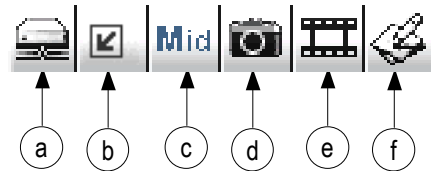


Online User

- ① You can get all the online users' information here (Name, IP Address, Authority Level, Resolution, and Image Quality).

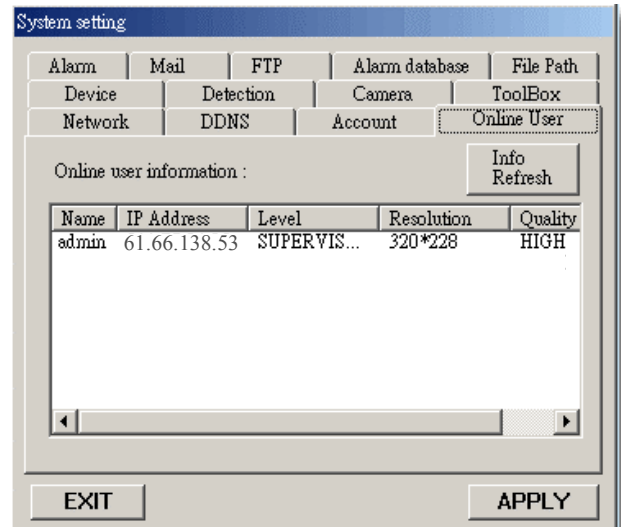


Alarm

- ① Alarm Trigger:
Enable or disable Email and FTP notification function.
- ② Alarm Method:
Two selections—Email or FTP.
- ③ Post Number:
MJPEG pictures (1-10 pictures).
- ④ Alarm Duration:
You can set the alarm duration time for 3 sec., 15 sec., 30 sec., 1 min., or 30 min..
- ⑤ Alarm Refresh:
Clean the alarm message “🔔” which is shown on the screen.

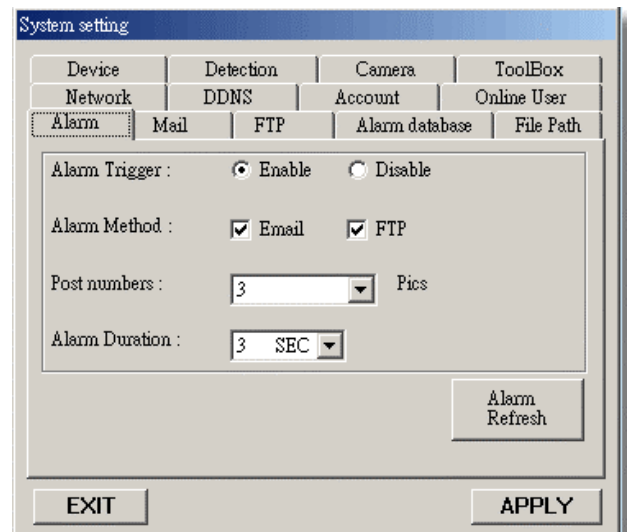



Note: When the alarm is triggered by the external device, such as PIR or Sensor, you can find “🔔” icon showed on the screen. And the Video Web Server will start recording automatically.

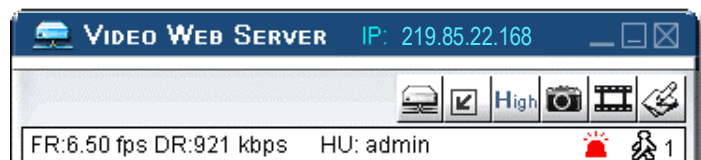

Mail

- ① When alarm is triggered, the Video Web Server will capture the instant picture (10 JPEG pictures max), and e-mail it to the assigned recipients.
- ② You can get information (SMTP server) from your e-mail system supplier.
- ③ You can add the email addresses where motion trigger captured pictures or film will be sent to by setting “Modify alarm email address” .
- ④ If the mail server require verify password, please key in user name and password.


Note: To get alarm mail when there is a motion trigger, you must enable the function of e-mail notification in the Alarm setting.

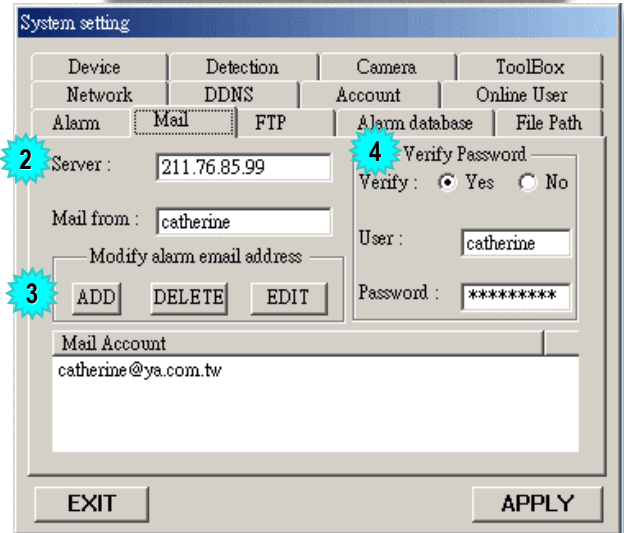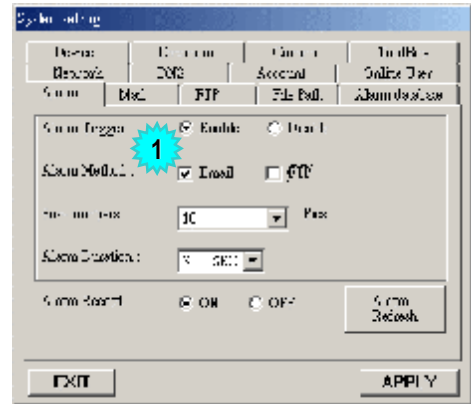

FTP


- ① When motion alarm is triggered, the video server will capture the instant picture and upload the captured image to the assigned FTP site.

Note: To get alarm notification at FTP site when there is a motion trigger, you must enable the function of FTP notification in the Alarm setting.

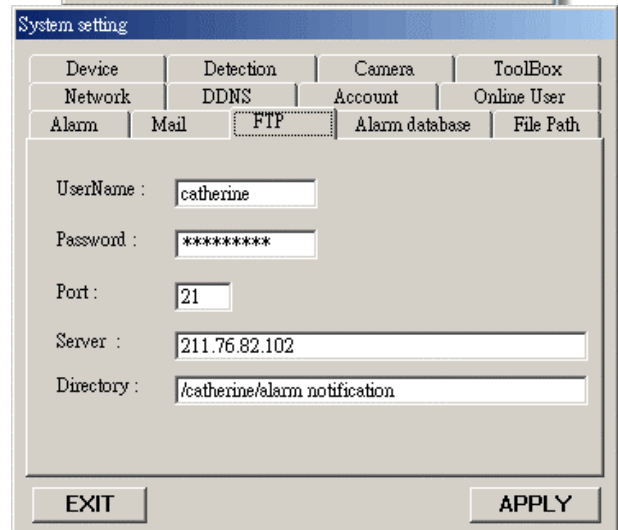


Alarm Database

- ① It's a database, which precisely lists all alarm triggered events, with IP address of Video Web Server, alarm triggered time, and number of frames.
- ② You can directly play, delete, or clear all alarm recording events with ease.
- ③ Click on the "Refresh" button to update the database list even you're checking alarm events.
- ④ All the alarm triggered files will be listed systematically for easily search.

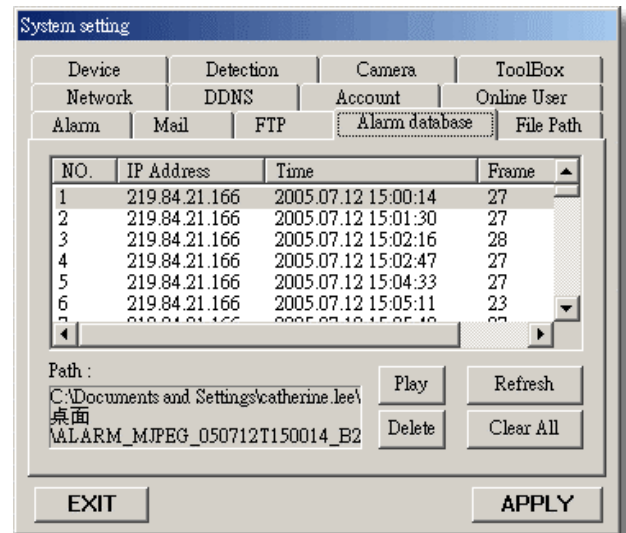



File Path

- ① Snapshot Path:
You can assign the route for snapshot image.
- ② Record Path:
You can assign the route for recording file.
- ③ Alarm Audio Path:
You can modify the alarm notification sound by yourself or use the default sound.

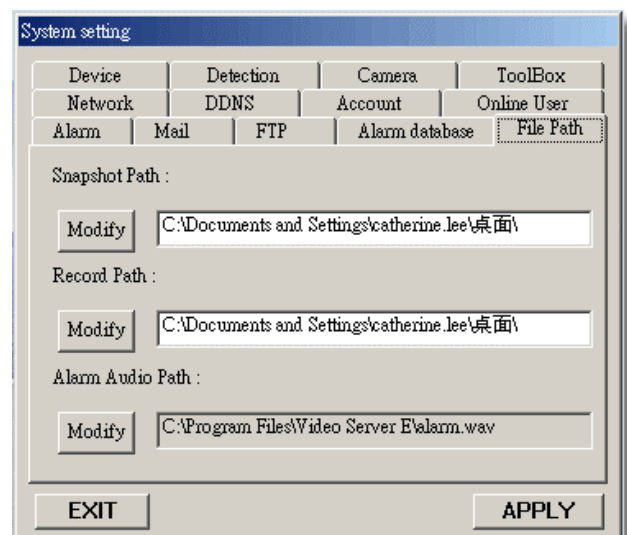



Device

- ① You can edit all the external device in this Windows.
- ② Select the device, and then press "Edit" button to set up "Device Type", "ID No.", "Protocol Type" and "Baud Rate" to control the equipments via Video Web Server.
- ③ This video web server supports different AP screens for control the following peripherals:
Camera, 1CH DVR, 4CH DVR (Full), 4CH DVR (Basic), 4CH DMR, 9 CH DMR, 16 CH DMR, 4 CH DQR, PTZ, 4 CH MPEG 2 DVR.

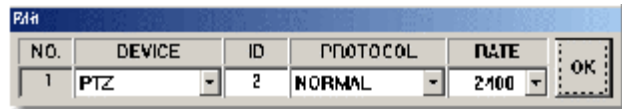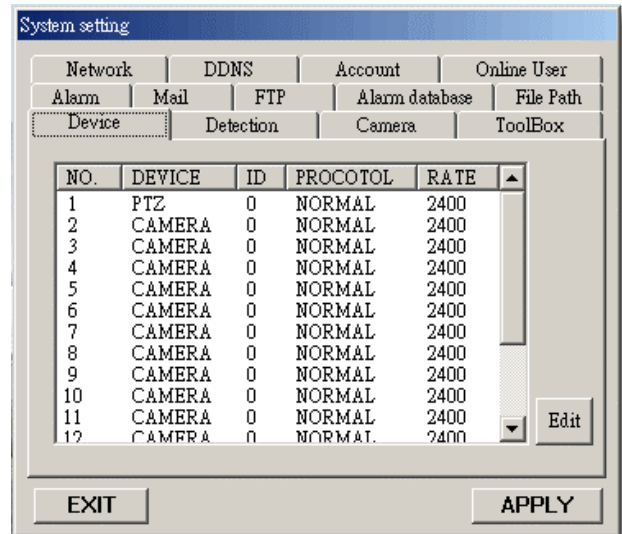

Detection

- ① You can set the detection area and detection sensitivity factors in this window.
- ② Select the device, and press "Edit" button to enter the setting page.

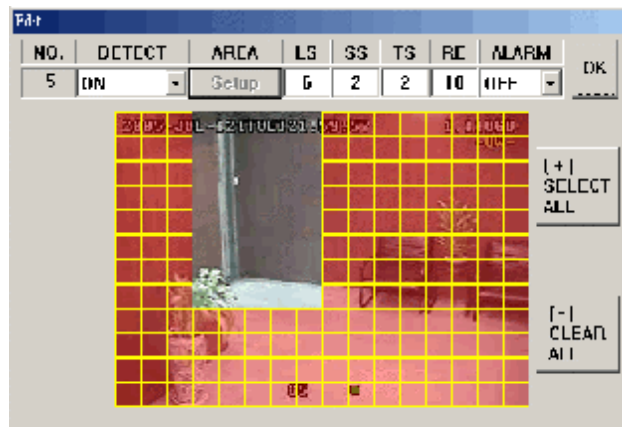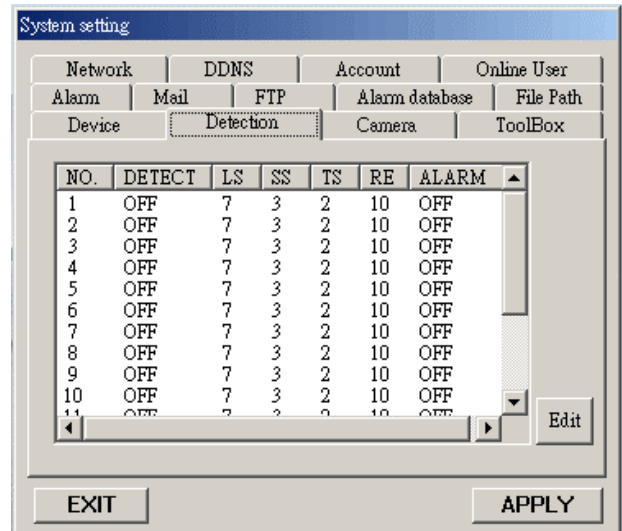



Camera

- ① You can get the information of the DVR firmware version in the window.
- ② You can select “turbo step” (1 - 10).

To speed up menu selecting or the control of the PTZ camera under video web server, you can activate "Turbo" function by clicking this button. Users are allowed to change the turbo steps from 1 to 10.

Ex. If you activate the TURBO function, and set “5” for turbo step, then when you press one of the button up/down/left/right, one mouse click will as if you click 5 times.

- ③ Max Log List: Set the maximum number of log list.
- ④ Server Log: Press “Server Log” button to enter the server log list window.

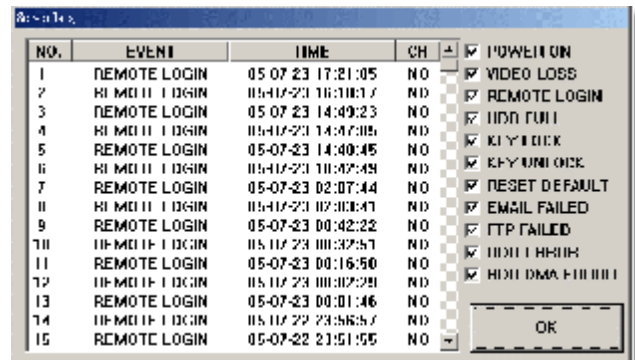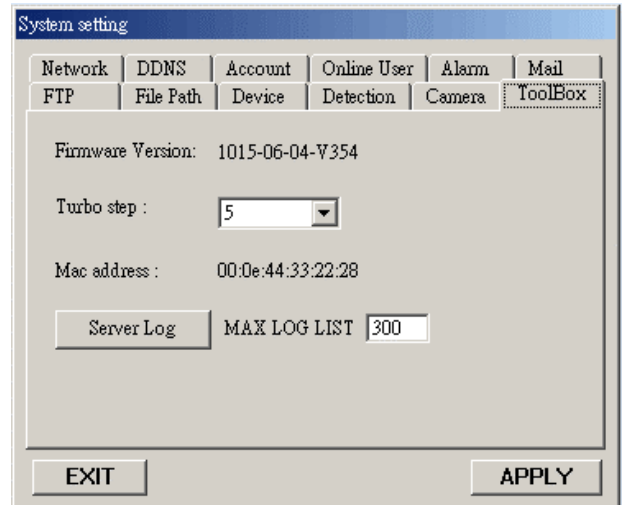



Tool Box

- ① You can get the information of firmware version in the window.
- ② You can select “turbo step” (1 - 10).

To speed up menu selecting or the control of the PTZ camera under video web server, you can activate "Turbo" function by clicking this button. Users are allowed to change the turbo steps from 1 to 10.

Ex. If you activate the TURBO function, and set “5” for turbo step, then when you press one of the button up/down/left/right, one mouse click will as if you click 5 times.


- ③ Max Log List: Set the maximum number of log list.
- ④ Server Log: Press “Server Log” button to enter the server log list window.

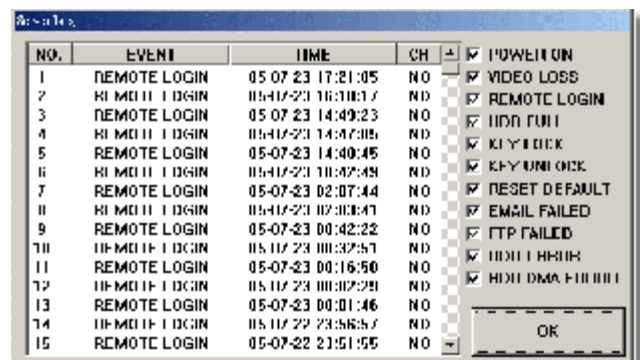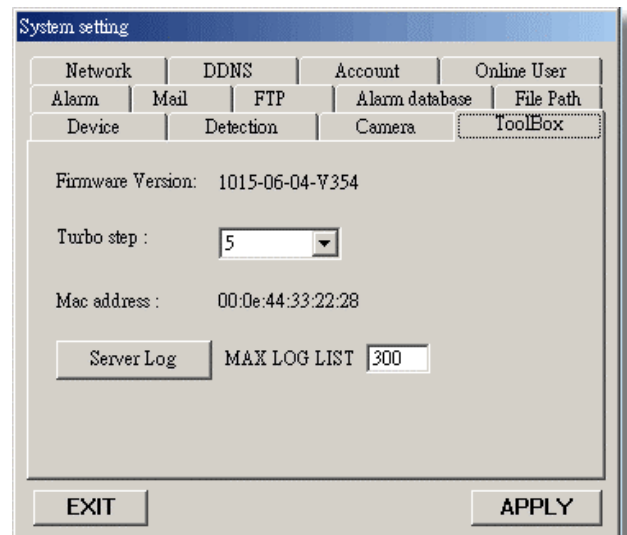

6.7 CONNECT TO AP VIA IE BROWSER

You can also connect to the video Web Server E via IE browser.
This function is suitable in both Windows 2000 and Windows XP.

Step 1: Type IP address into the URL address box and press “enter”. Then you’ll see the following page.

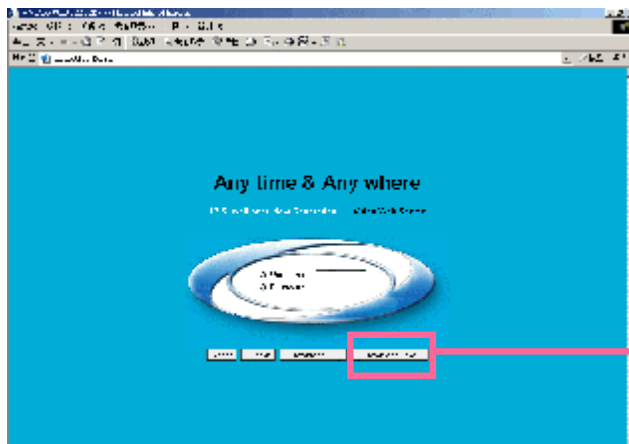

Download JAVA

Step 2: Press the “Download JAVA” button, and you’ll see the following page.



Download JRE 5.0 Update 4

Step 3: Press “Accept License Agreement”.



Accept License Agreement


Step 4: Choose “Windows Offline Installation” or “Windows Online Installation”.




- Windows Offline Installation
- Windows Online Installation

Step 5: Take “Windows Offline Installation” as an example.

Save the setup file “jre-1_5_0_04-windows-i586-p” on the desktop of PC.

Click “ “ twice to setup.

Step 6: After installation, please type the IP address of your DVR into the URL address box and press “enter”. Then you’ll see the login page. Key in the “user name” and “password”. Then you’ll see the following page.

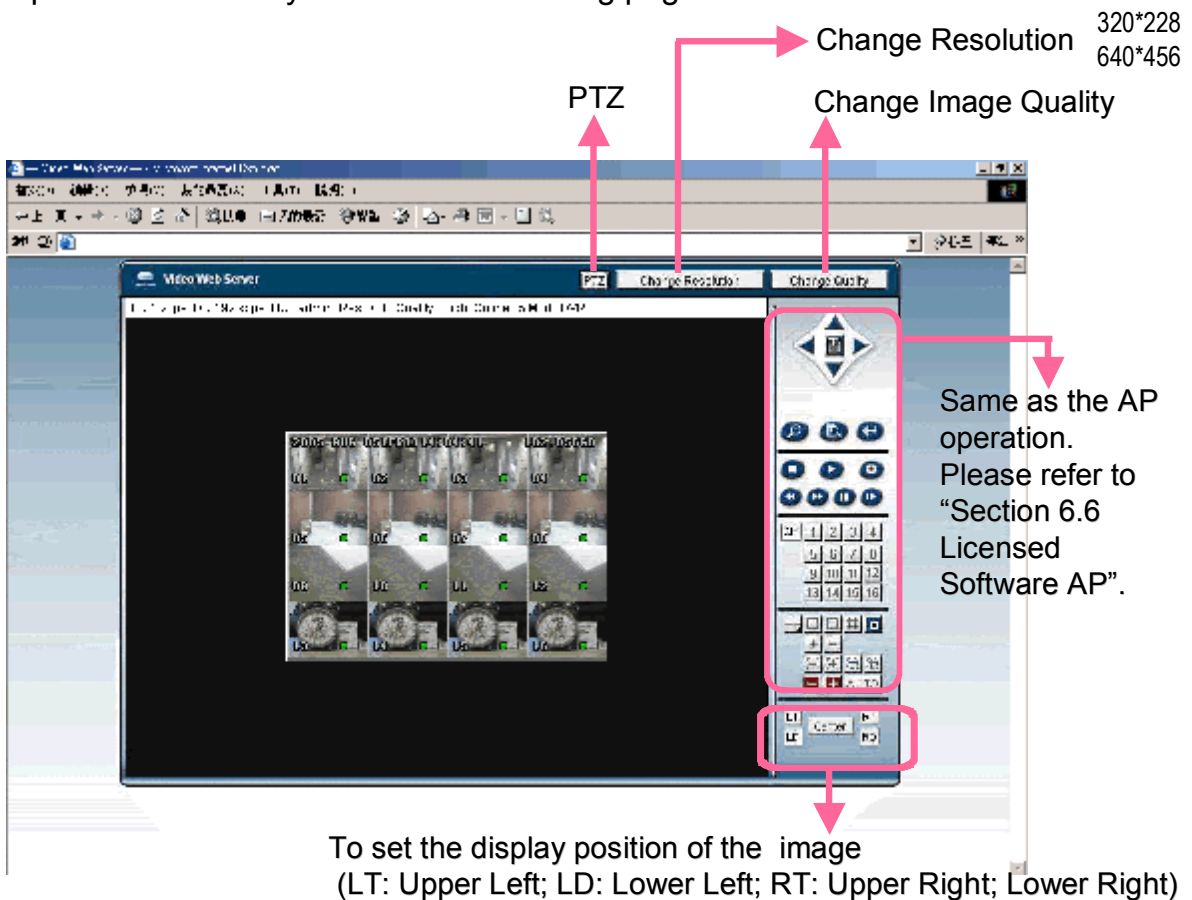

6.8 R.E.T.R.

Before you activated the R.E.T.R. function, please set the detection area and activated the motion detection function first.

There are three way to activate the Remote Event Trigger Recording function.

- 1) DVR Front Panel:
Press “Menu” + “-” buttons on the DVR front panel. And R.E.T.R. function will activate 3 / 5 / 10 minutes later. Please refer to “Section 5.12”.
When the R.E.T.R. is activated, the red “R.E.T.R” OSD will shown on the screen.
- 2) Licensed Software AP:
Press “R.E.T.R.” button on the AP control panel to activate the R.E.T.R. function immediately. Please refer to “Section 6.6”.
- 3) IR Remote Control:
Press “R.E.T.R.” button on the IR remote control to activate the R.E.T.R. function 3 / 5 / 10 minutes later. Please refer to “Appendix #3” and “Section 5.12”.

6.9 GPRS

GPRS function Installation (Take **Motorola** 768i for example)

- 1) First of all, you should make sure that your cell phone supports GPRS and MIDP2.0 (JAVA application).
- 2) Connect to the website <http://61.62.147.111> via the browser of your cell phone. (Make sure that your GPRS function is working).
- 3) Download and install Video Server 732E.
- 4) After installation, the 732E icon will shown on the desktop of the phone.
- 5) Click the icon of Video Server 732E to enter the setting frame. Please tap in the IP address, port, username, password, and the ID of the DVR, which you like to see. And press “connect” button, after you finished the setting.
- 6) After connected to the 732E video server, you will see the AP control panel on the screen.

6.10 OPTIONAL PERIPHERALS

For the operation of the following peripherals, please refer to their manual individually.

- 1) IDA (independent disk array).
- 2) DVD R/W or CD R/W backup.
- 3) VGA output.
- 4) GPRS connector.

TROUBLE SHOOTING

7.1 FAQ

Please refer to the FAQ table below for easy trouble shooting. The table below describes some typical problems and also their solutions. Please check them before calling your DVS dealer.

PROBLEM	SOLUTION
No power	Check power cord connections Confirm that there is power at the outlet
Not working when pressing any button	Check if it is under Key Lock mode Press any key and then key in the password to exit Key Lock mode
No recorded video	Check if the HDD is installed and connected properly
Timer Record enable does not working	Check if the Record Enable is set to YES
No live video	Check camera video cable and connections Check monitor video cable and connections Confirm that the camera is power supplied Check the setting of camera lens
Under overwriting and duplex modes, the playback motion is interrupted	please press "STOP" button and then the "PLAY" button to play again
Fix for a long time	Please stop record for 10 seconds before you switch the NTSC / PAL sytem of the DVR
The media player of the recorded files	"WINDVD", "PowerDVD", and "VLC media player"

NOTE:

You can go to the website www.cpcamcctv.com, and press the "Global Service" icon. Then you could lead your valuable comments below, and our service representative will be contacting you shortly.


The image shows two browser screenshots. The left one is the homepage of www.cpcamcctv.com, featuring a large graphic with an eye and the text 'Evolution for your Demand'. A red box highlights the 'Global Service' link in the top navigation bar. The right screenshot shows the 'Global SERCO Service Center Online' page, which includes a contact form with fields for Name, E-mail, and Phone, and a 'Submit' button. A red box also highlights the 'Global Service' link in the top navigation bar of this page.

APPENDIX #1 – INSTALL THE HDD

Carefully following the steps to ensure correct installation.

*** Note: If you want to install two HDDs, please set one HDD to “Master Mode” or “Single Mode”, and the other one to “Slave Mode”. ***

- 1) Open the upper cover of the DVR and screw out the bracket. ① ~ ②
- 2) Screw HDD to the HDD bracket. ③ ~ ⑧
- 3) Connect the HDD to power connector and IDE BUS (make sure to align the HDD precisely to the pin connection). ⑨ ~ ⑭
- 4) Close the upper cover of the DVR.

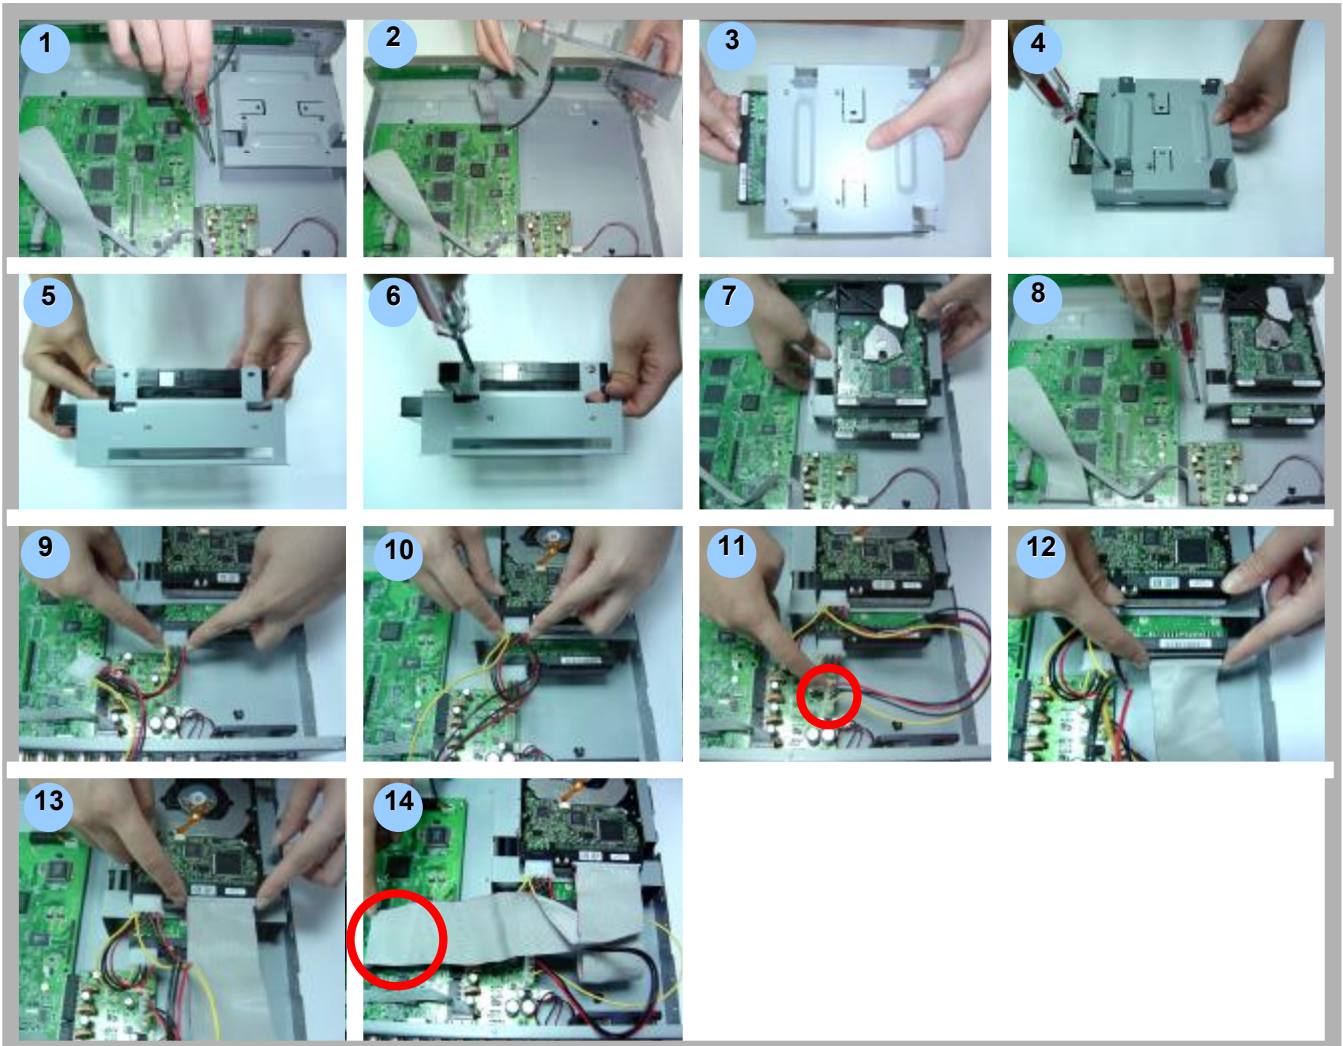

APPENDIX #2 – PIN CONFIGURATION

PIN 1. GND
GROUND

PIN 2. ~ PIN 9. ALARM INPUT

To connect wire from ALARM INPUT (PIN 2 -- 9) to GND (PIN 1) connector, DMR will start recording and buzzer will be on.

When Menu/ Camera/ Alarm is set up to “Low” : When alarm input signal is “ Low ”, the unit starts to record and buzzer.

When Menu/ Camera/ Alarm is set up to “High” : When alarm input signal is “ High ”, the unit starts to record and buzzer.

PIN 10. PIN OFF

PIN 11. RS232-TX

DMR can be controlled remotely by an external device or control system, such as a control keyboard, using RS-232 serial communications signals.

PIN 12. RS485-A

DMR can be controlled remotely by an external device or control system, such as a control keyboard, using RS485 serial communications signals.

PIN 13. EXTERNAL ALARM NO

Under normal operation COM disconnect with NO. But when Alarm triggered, COM connect with NO.

PIN 14. PIN OFF

PIN 15. ~ PIN 22. ALARM INPUT

To connect wire from ALARM INPUT (PIN 15 -- 22) to GND (PIN 1) connector, DMR will start recording and buzzer will be on.

When Menu/ Camera/ Alarm is set up to “Low” : When alarm input signal is “ Low ”, the unit starts to record and buzzer.

When Menu/ Camera/ Alarm is set up to “High” : When alarm input signal is “ High ”, the unit starts to record and buzzer.

PIN 23. RS232-RX



DMR can be controlled remotely by an external device or control system, such as a control keyboard, using RS-232 serial communications signals.

PIN 24. RS485-B

DMR can be controlled remotely by an external device or control system, such as a control keyboard, using RS485 serial communications signals.


PIN 25. EXTERNAL ALARM COM

Under normal operation COM disconnect with NO. But when alarm triggered, COM connect with NO.

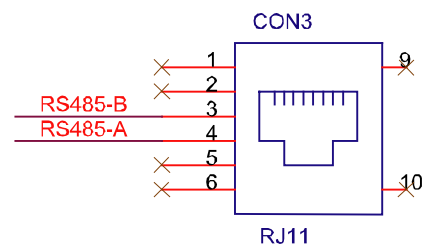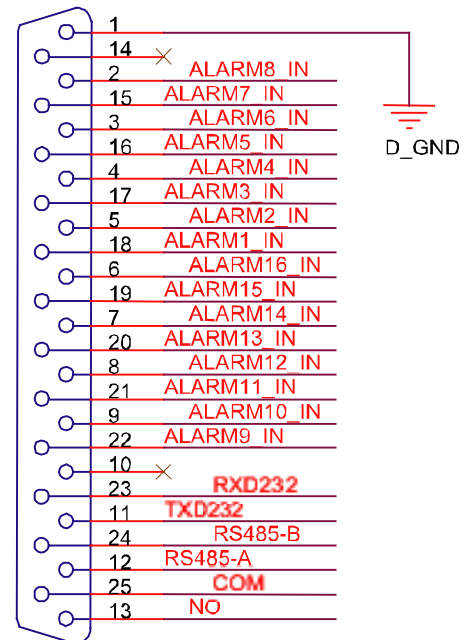

APPENDIX #3 – IR TRANSMITTER

- * CAMERA control buttons: Button (1) to (10). (button (9) is used for control the switch)
- * DVS control buttons: Button (11) to (29).
- * OTHER control buttons – Support controlling both CAMERA & DVS. Button (30) to (33).
- * Digital Zoom is not supported now. * F2 is dummy button.

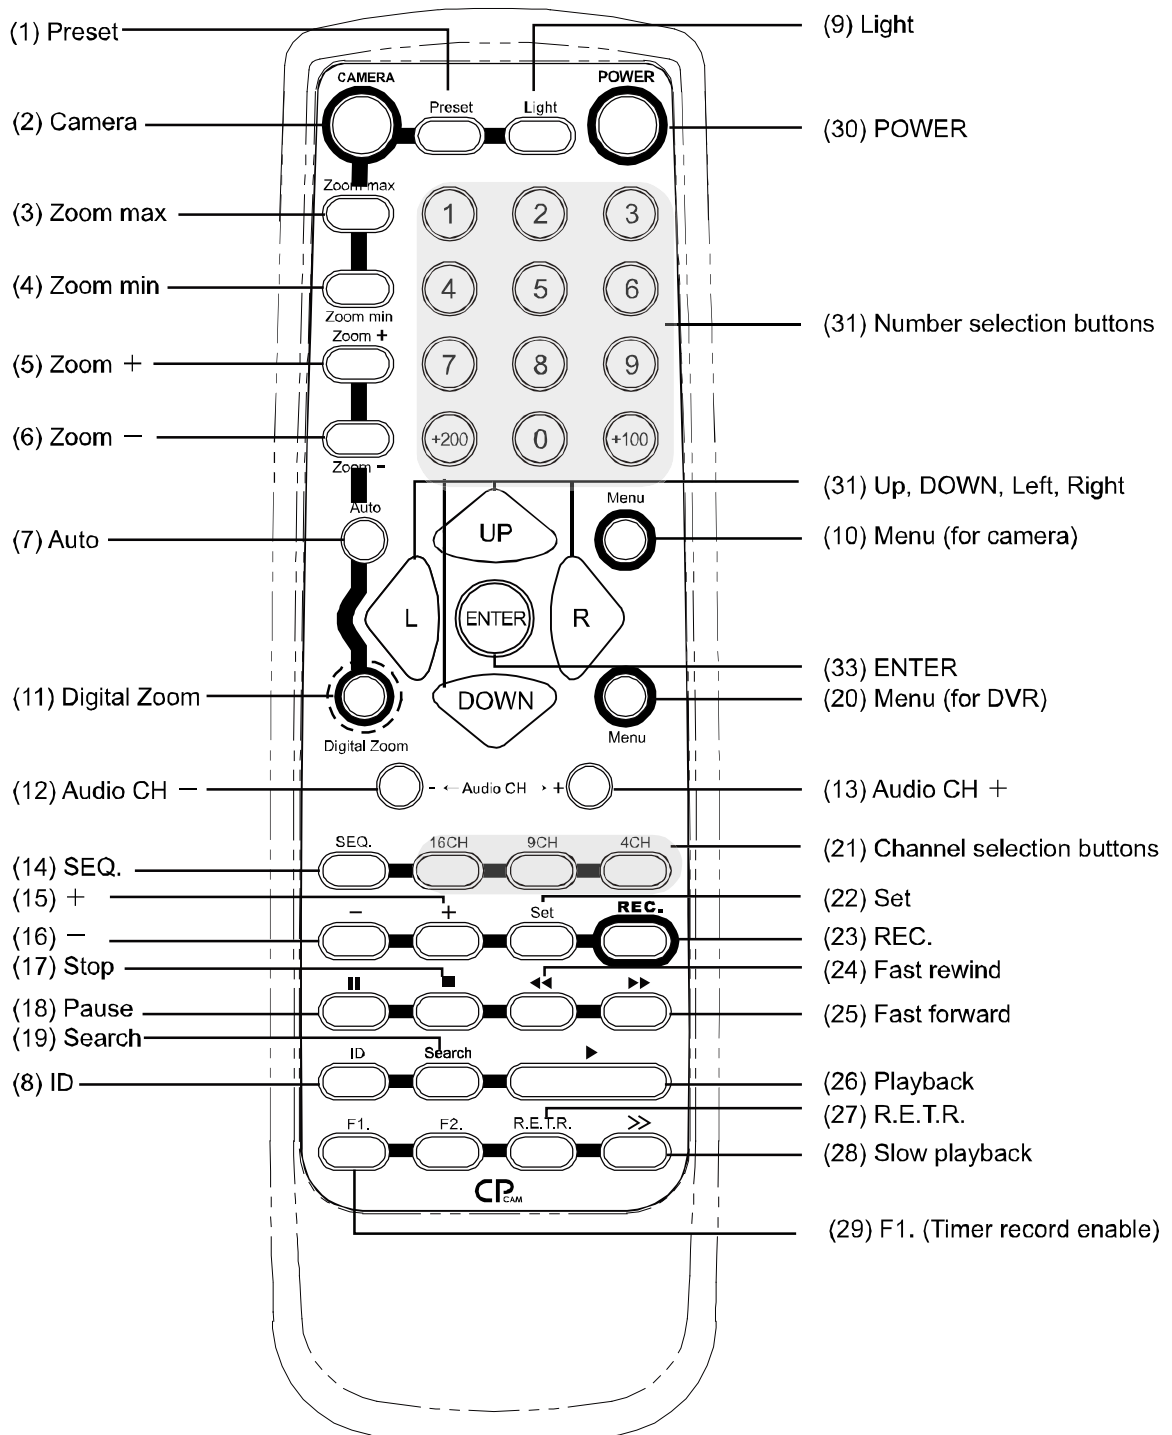

CAMERA

1) Preset:

Press this button to set the preset points of the PTZ.

Use the “◀” “▶” to move the cursor.

Use the “ENTER” button to enter the submenu, and confirm the selection.


Use the “MENU” button to enter the menu mode, confirm the change and exit the menu mode.

* ADD: add the preset points,
maximum is 16 preset points.

* INS: to insert the camera preset.

* EDIT: to edit the preset points

* DEL: delete the preset points

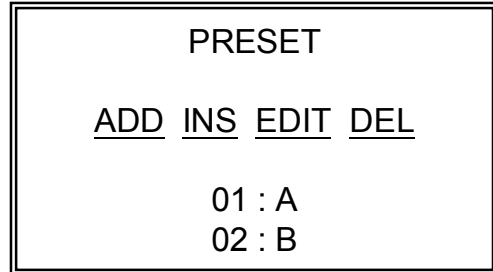

2) Camera:

In the PTZ control mode, press the “CAMERA” button + “ID number of the PTZ”, and then press “ENTER” to select and control the PTZ camera.

3) Zoom max:

Press the “Zoom max” button, then the image of the PTZ will zoom in to a maximum size.

4) Zoom min:

Press the “Zoom min” button, then the image of the PTZ will zoom out to a minimum size.

5) Zoom + :


Press the “Zoom +” button,
to change the optical zoom in ratio of the PTZ.

6) Zoom — :

Press the “Zoom —” button,
to change the optical zoom out ratio of the PTZ.

7) Auto :

Press the “Auto” button, to enter the auto mode.

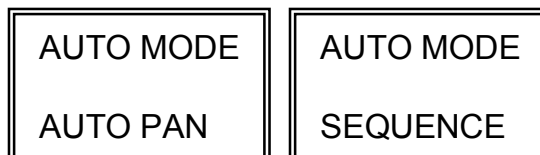

Use “▲” “▼” to select between “Auto Pan” mode and “Sequence” mode, and press “Menu” button to confirm the selection.


* In the “Auto Pan” mode, PTZ will pan automatically.

* In the “Sequence” mode, PTZ will pan according to the preset point settings.







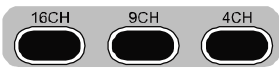





- 8) ID :
Press the “ID” button, the “CAMERA ID” will be shown the screen.
- 9) Light :
Press the “Light” button, to turn on / turn off the power of remote switch.
- 10) Menu :
Press the “Menu” button, to enter the main menu of the CAMERA.

DVS

- 11) Digital Zoom :
Press the “Digital Zoom” button to enlarge the picture of selected channel (2X).
Press the “Digital Zoom” button again to exit from the zoom picture.
- 12) Audio CH – :
Press the “Audio CH – ” button to select audio channel and play mode (live or playback).
- 13) Audio CH + :
Press the “Audio CH – ” button to select audio channel and play mode (live or playback).
- 14) SEQ:
Press the “SEQ” button, to activate / inactivate the CALL MONITOR function.
When this function is activate, the screen will display each channel in sequence.
- 15) + :
Press the “+” button, to change the settings in the menu.
- 16) – :
Press the “–” button, to change the settings in the menu.
- 17) ■ :
Press the “■ ” button, to stop the playback files.
- 18) ▬ :
Press the “▬ ” button, to pause the playback files.
- 19) SEARCH :
Press the “SEARCH” button, to enter the search mode.
Please refer to “Section 6.1 Search” for detailed information.

- 20) Menu :
Press the “Menu” button, to enter the main menu of the DVS.
- 21) Channel selection buttons :
Press  buttons, to select the 16 / 9 / 4 channel display.
- 22) Set:
Press the “Set” button, to swap channel display position.
For example, if you want to swap “01” channel with “16” channel.
→ Move the cursor to the “01” channel and press “Set” button.
→ Use “+” or “-” to select the “16” channel, and press “ENTER” button.
→ Press “Menu” button to exit the “Set” mode.
- 23) Rec :
Press the “Rec” button to start the recording function of 1-16 channels.
- 24) Fast rewind :
Under playback mode, press the “◀◀” button to fast rewind.
- 25) Fast forward :
Under playback mode, press the “▶▶” button to fast forward.
- 26) Play :
Press the “▶” button to start playing the latest recorded file.
- 27) R.E.T.R. :
Press the “ R.E.T.R. ” button, to activate the Remoter Event Trigger Recording function 3 / 5 / 10 minutes later. Please refer to “Section 5.12”.
- 28) Slow playback :
Press “>>>” button to get 1/4X speed playback and press twice to get 1/8X speed, three times to get 1/16X speed, and four times to get 1/32X speed.
- 29) F2 :
Press the “ F2 ” button, to activate the timer recording function.

OTHER

- 30) POWER :
Press the “POWER” button, to turn off the power of DVS.
(If the DVS is under recording, then you must stop recording first.)
- 31) Number selections buttons :
Press the “  ” buttons, to select numbers
/ to select the channel number
- | | | |
|---|---|---|
|  |  |  |
|  |  |  |
|  |  |  |
- 32) UP, DOWN, LEFT, RIGHT:
Press the “UP”, “DOWN”, “LEFT”, “RIGHT” button, to move the cursor / to control the PTZ camera.
- 33) ENTER :
Press the “ENTER” button, to enter a submenu mode / to confirm the selection.

APPENDIX #4 – RECORDING TIME TABLE

Take NTSC system as an example.

Record mode	Quality	IPS	500GB record time	Record day
Frame	Best	120	166h	7
		60	266h	11
		30	364h	15
		15	436h	18
	High	120	197h	8
		60	335h	14
		30	421h	18
		15	526h	22
	Normal	120	230h	10
		60	393h	16
		30	498h	21
		15	613h	26
	Basic	120	288h	12
		60	478h	20
		30	620h	26
		15	772h	32
Field	Best	240	174h	7
		120	285h	12
		60	466h	19
		30	602h	25
	High	240	212h	9
		120	325h	14
		60	531h	22
		30	689h	29
	Normal	240	289h	12
		120	375h	16
		60	634h	26
		30	846h	35
	Basic	240	313h	13
		120	508h	21
		60	833h	35
		30	1035h	43
CIF	Best	480	169h	7
		240	293h	12
		120	375h	16
		60	460h	19
	High	480	204h	9
		240	352h	15
		120	473h	20
		60	577h	24
	Normal	480	225h	9
		240	374h	16
		120	539h	22
		60	654h	27
	Basic	480	285h	12
		240	482h	20
		120	639h	27
		60	793h	33



CP CAM PASA
Supreme MPEG-4 DVR

Provide all the great features to you.
www.cpcamcctv.com



5Pentaplexes:
simultaneously control all the functions
1. Live display 2. Record 3. Playback 4. Back up 5. Network

4Add-Value:
greatly improve your PASA's ability (optional)
1. GPRS Surveillance 2. VGA Output 3. Disc Array 4. DVD RW

3Special Features:
allow for convenient control management
1. RETR 2. Hot Point(mouse control) 3. Non Format HDD

2Advanced Design:
give you a better user friendly environment
1. Advanced Motion Detection 2. Quick Event Search

